RF/BB Connections v. 0.0 ed.7

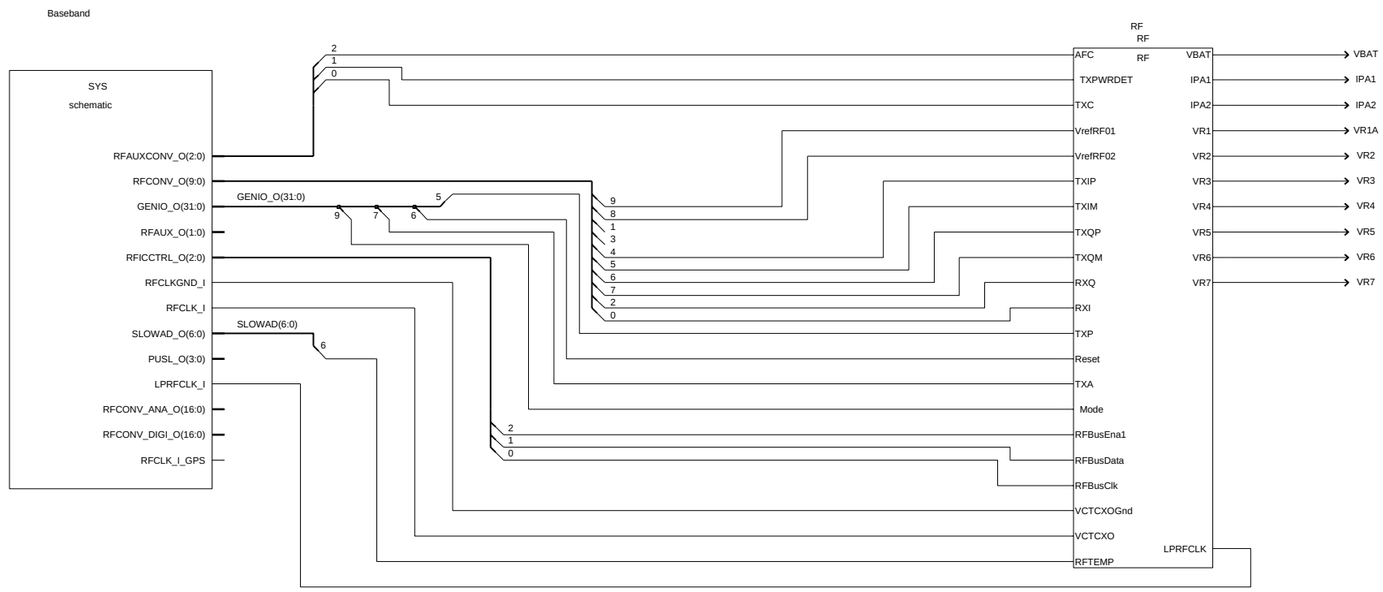

Copyright ©Nokia 2004. All rights reserved.

RF Block Diagram v.0.0 ed.13

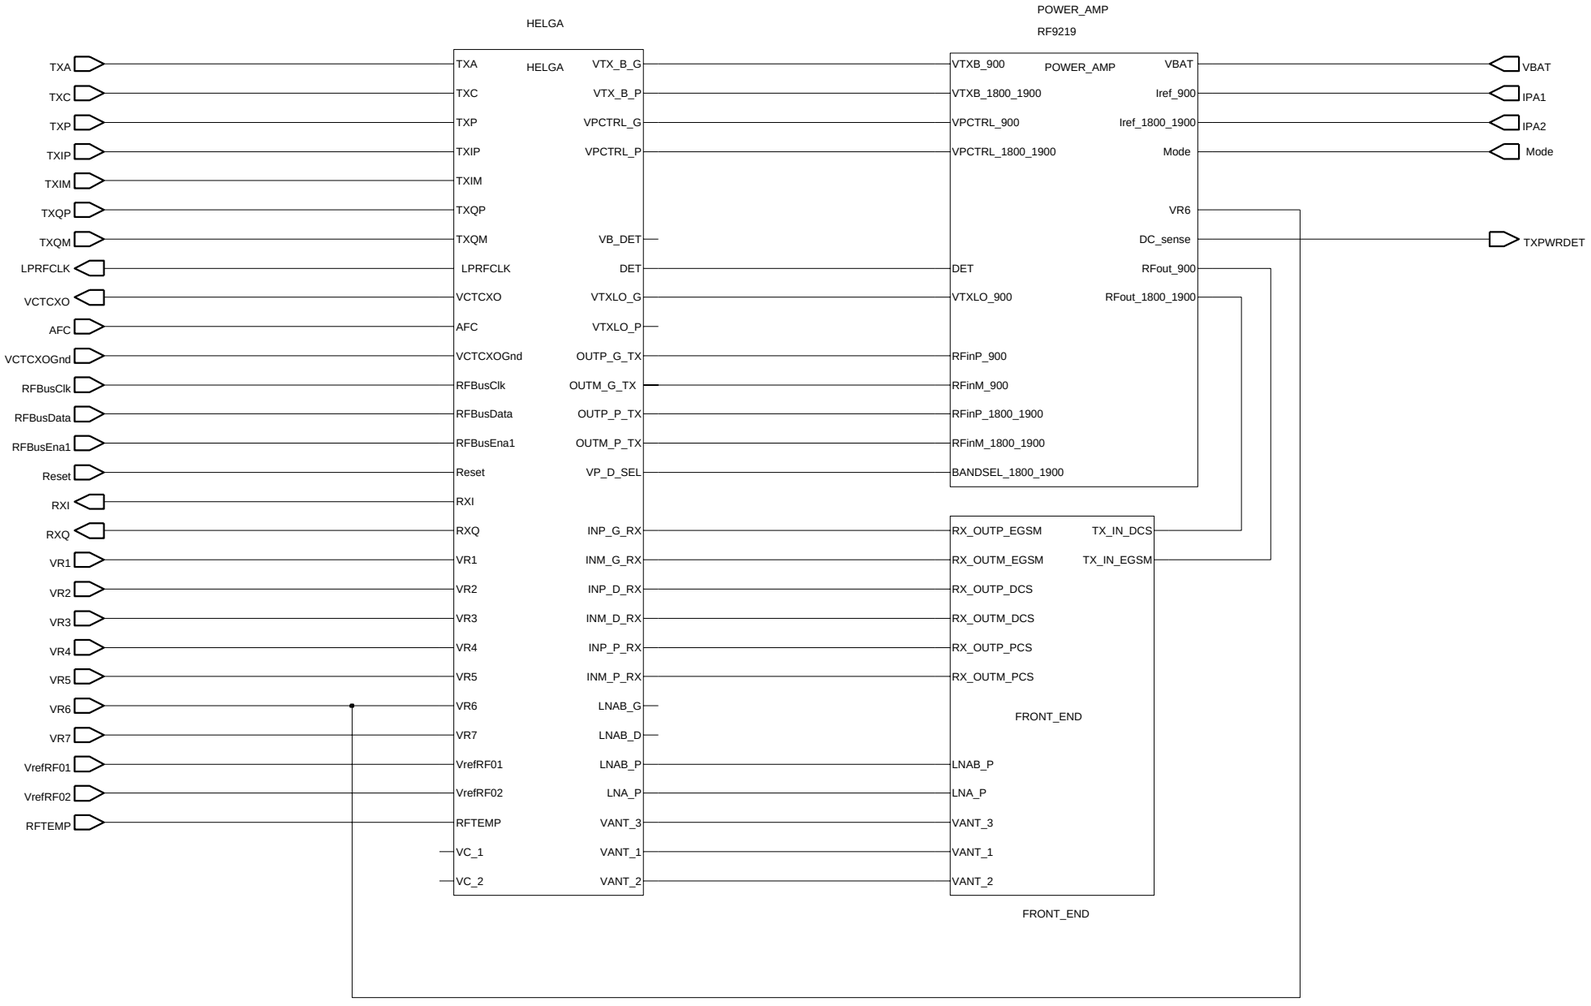

Copyright ©Nokia 2004. All rights reserved.

Helga RF Schematic Diagram v. 0.0 ed.42

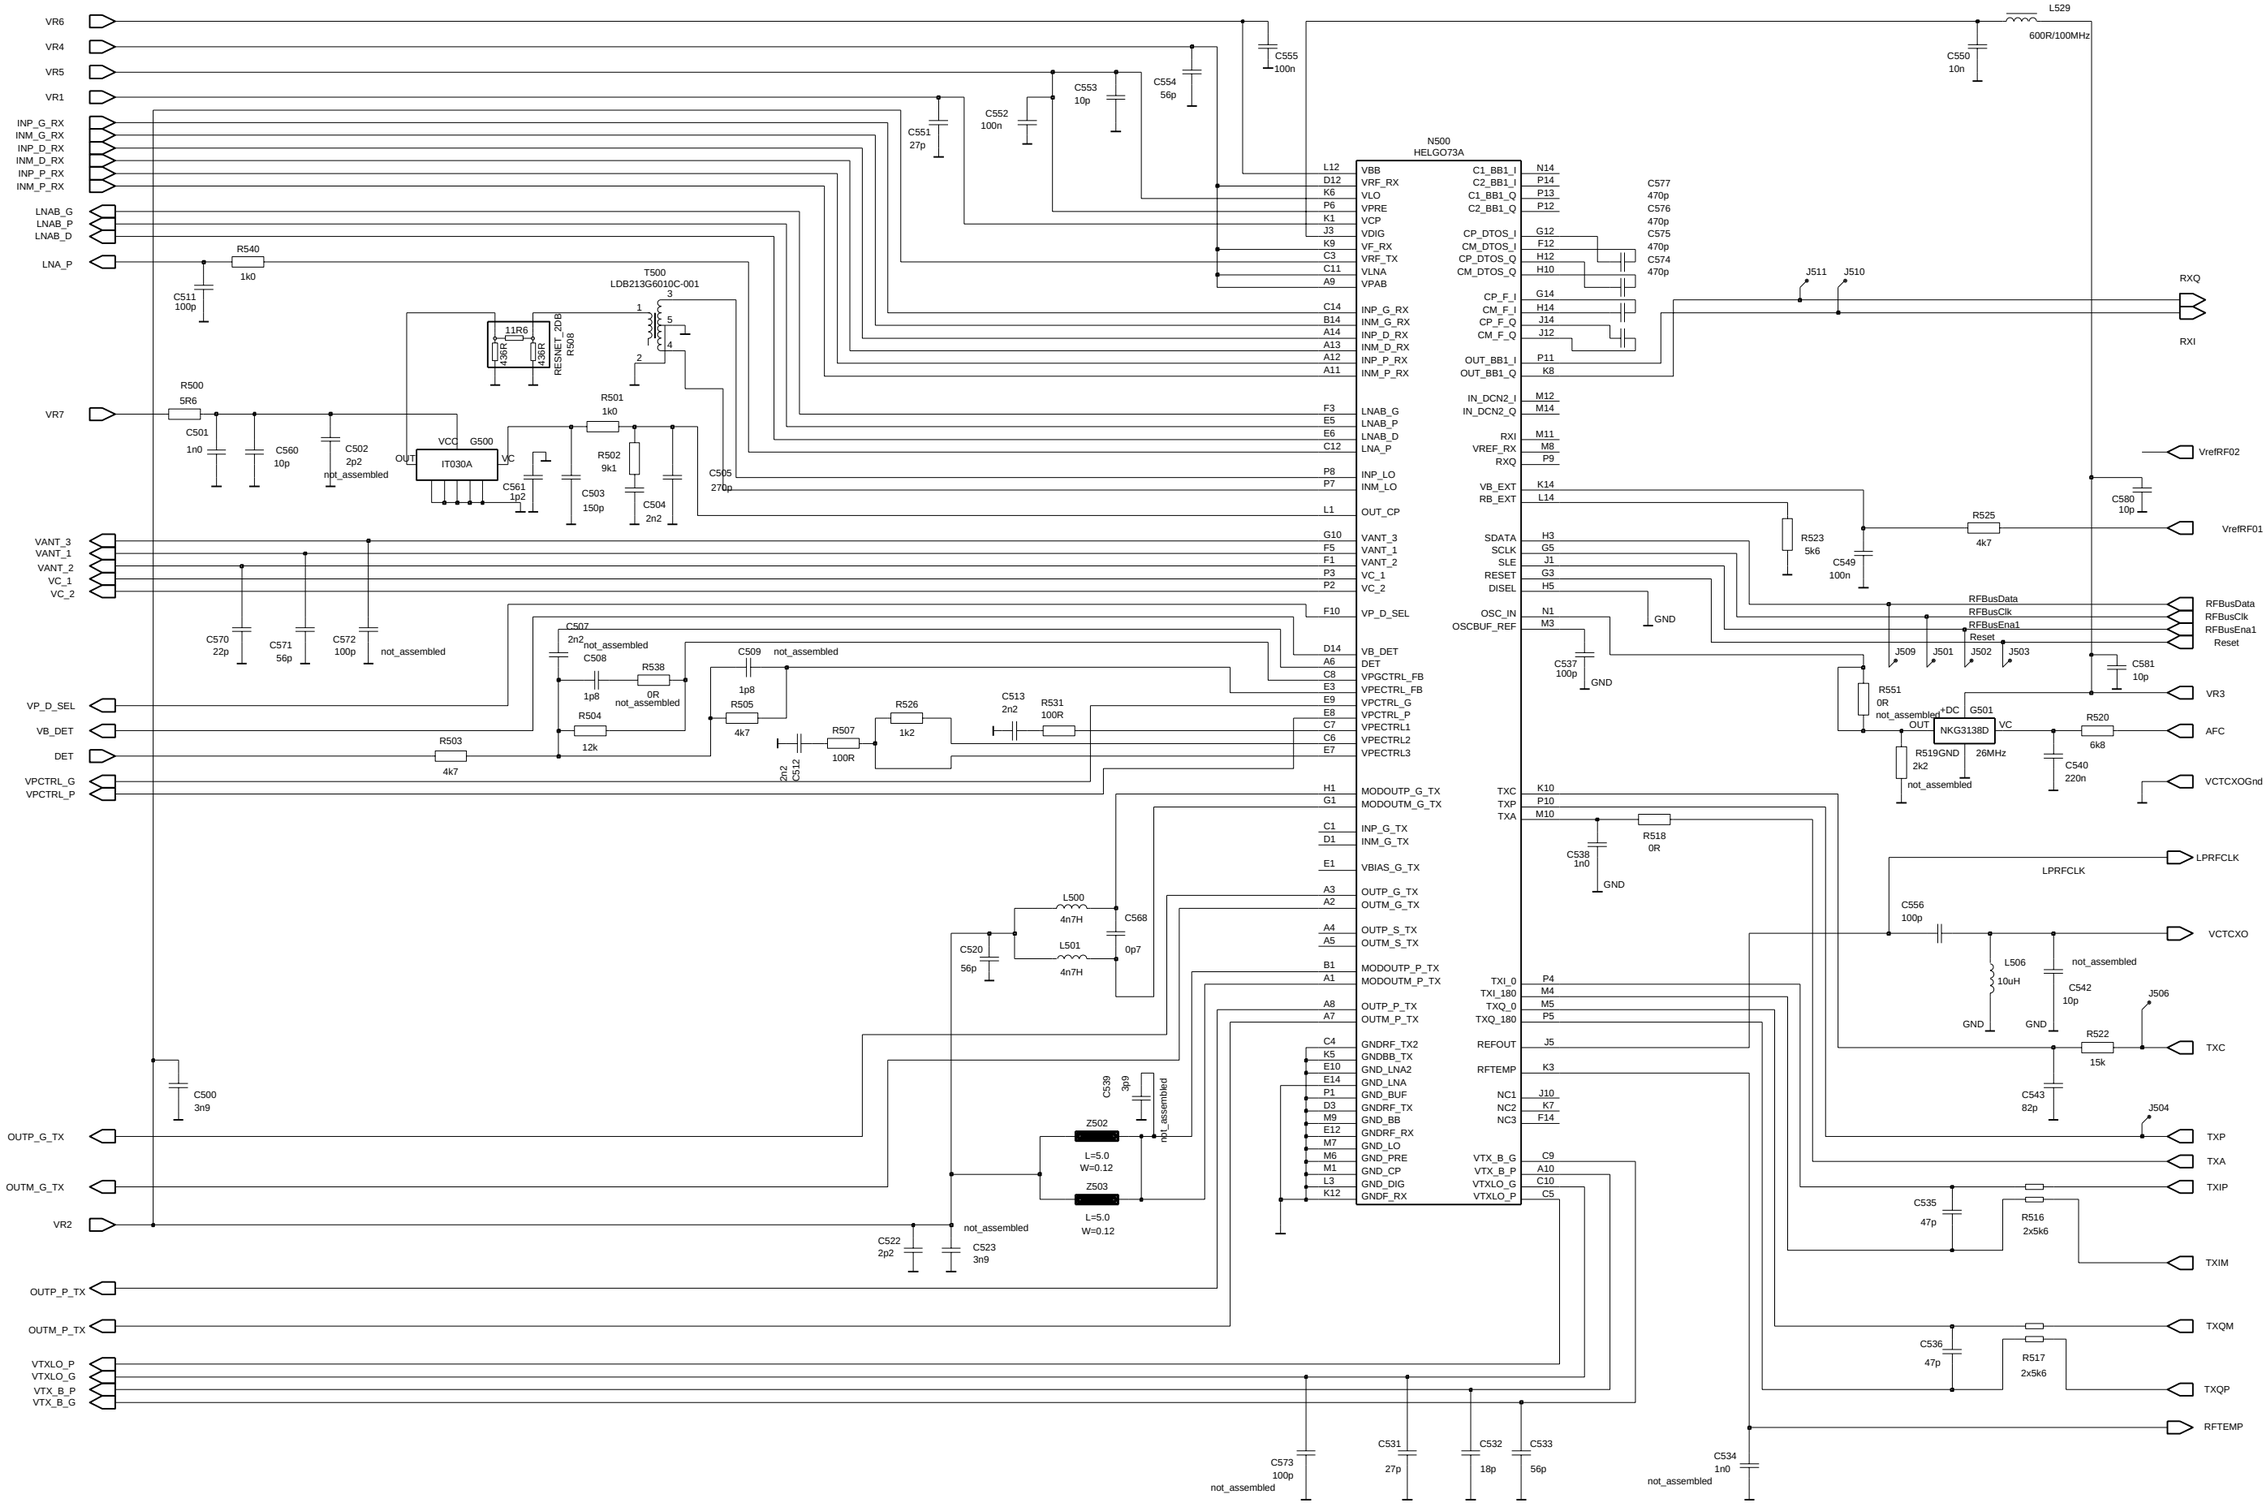

Copyright ©Nokia 2004. All rights reserved.

Receiver Front End and Antenna Switch v. 0.0 ed.20

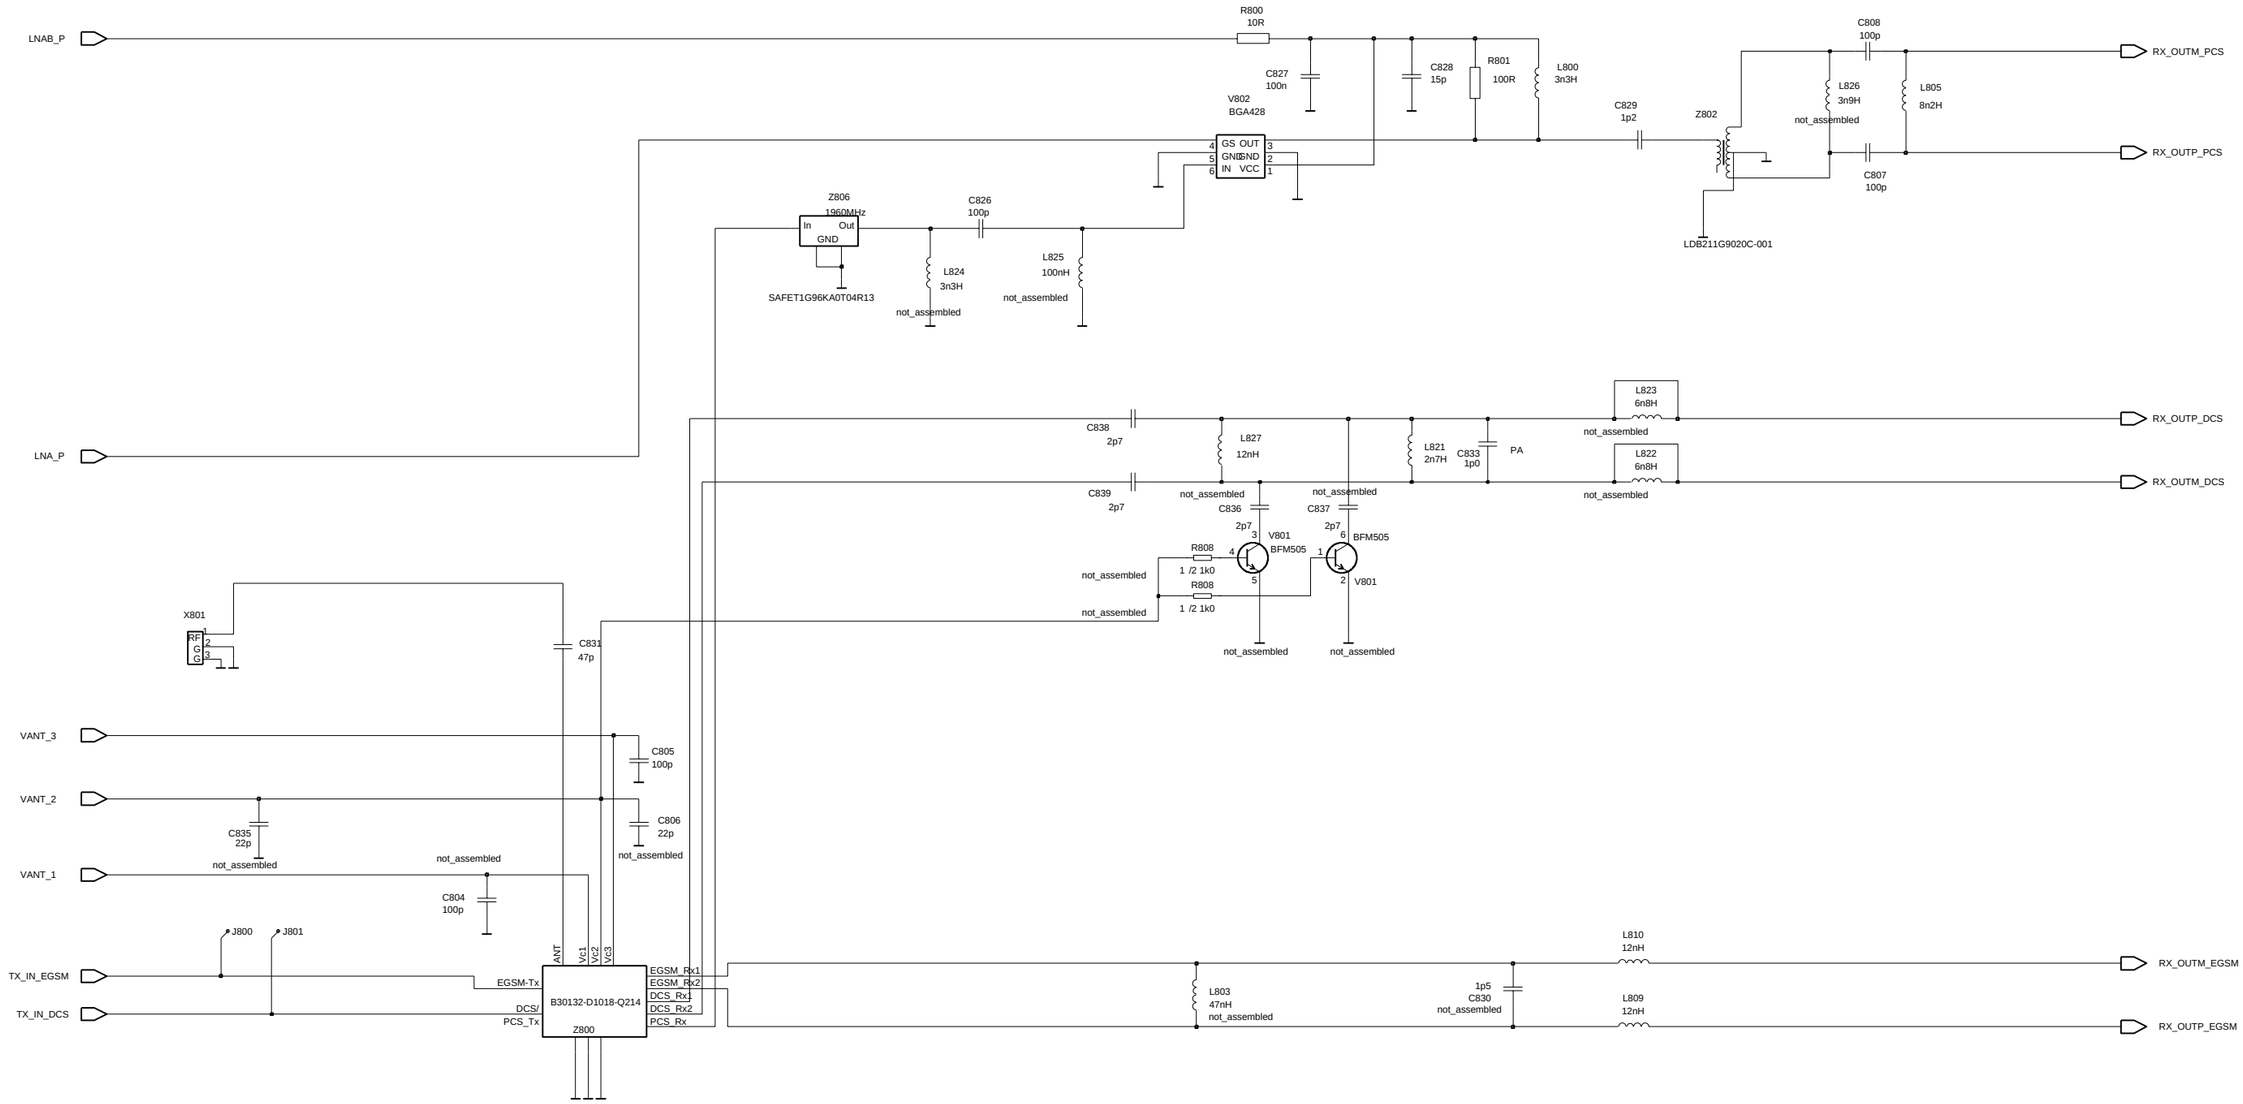

Copyright ©Nokia 2004. All rights reserved.

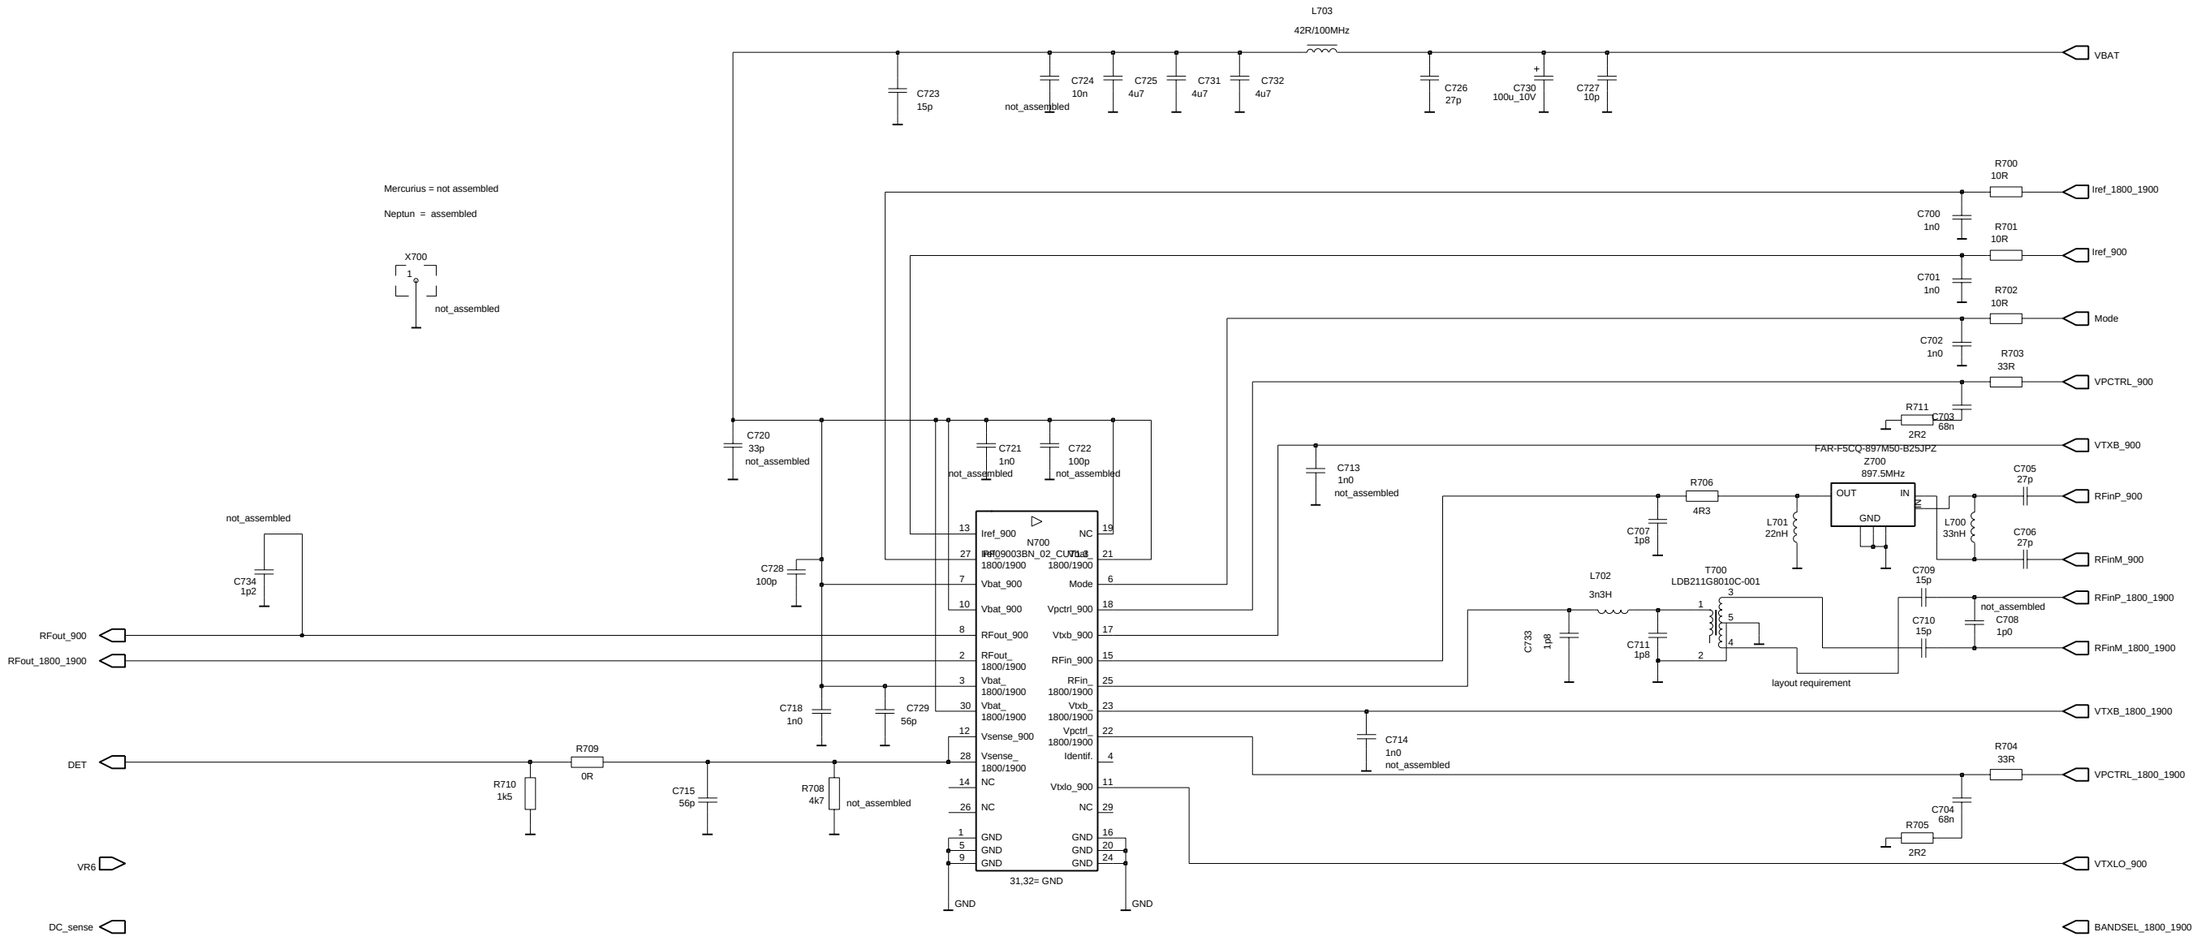

Copyright ©Nokia 2004. All rights reserved.

Baseband Block Diagram v. 5.0 ed.33

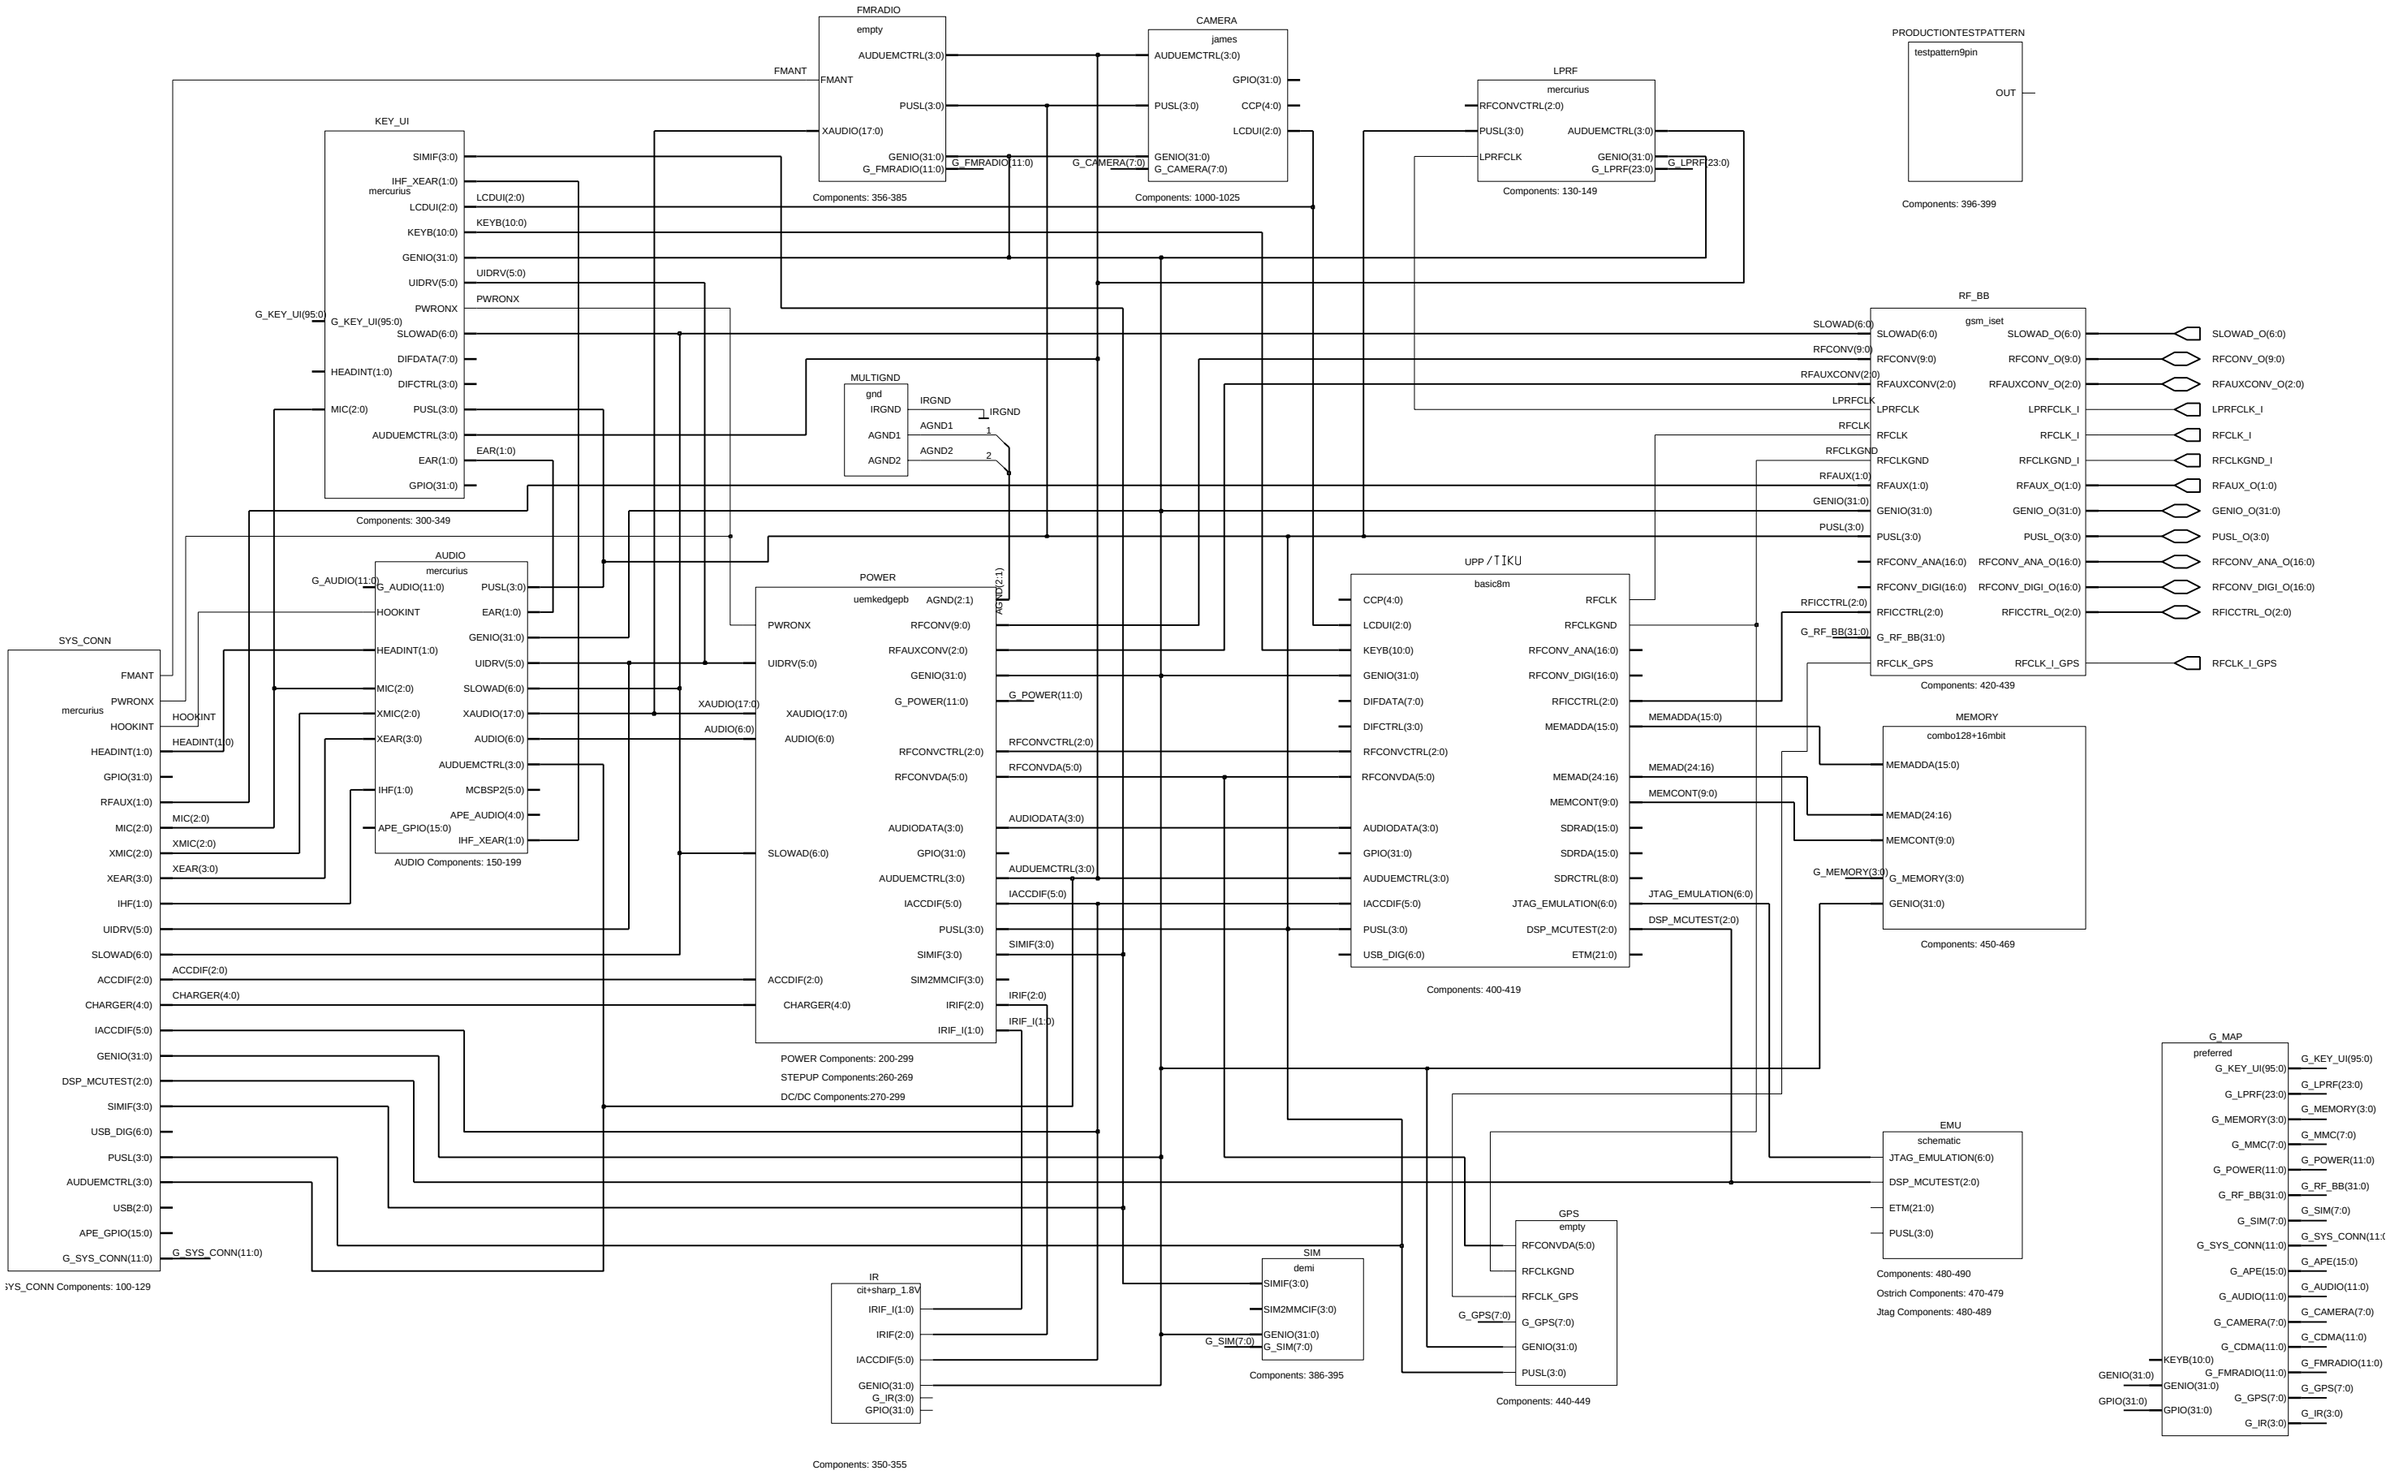

Copyright ©Nokia 2004. All rights reserved.

Camera Diagram v. 0.0 ed. 58

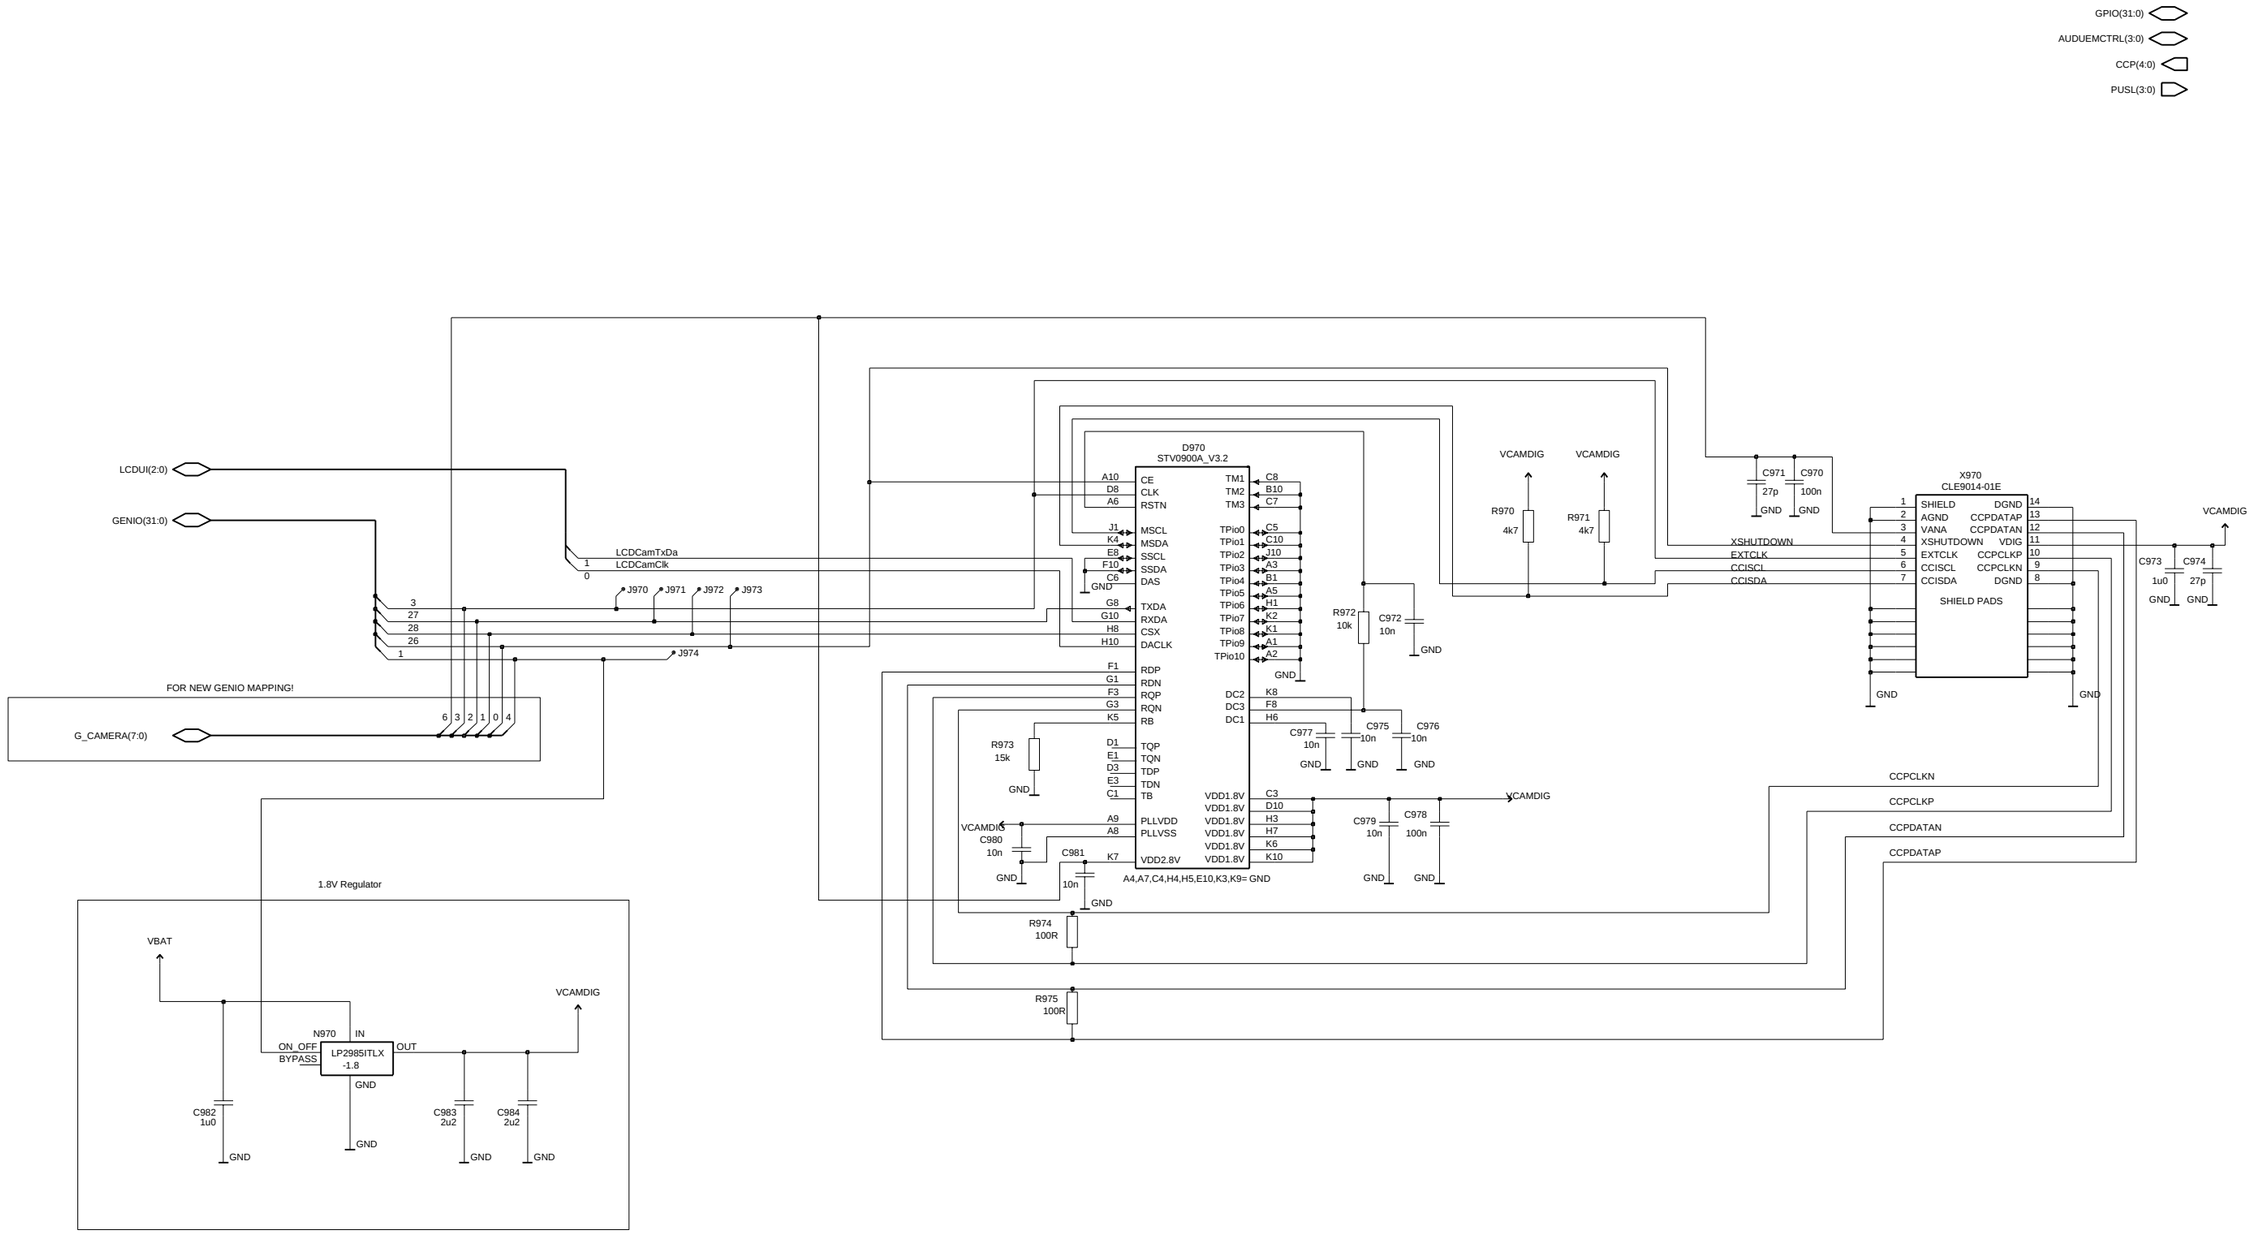

Copyright ©Nokia 2004. All rights reserved.

Combo Memory 128+8Mbit v. 2.0 ed.76

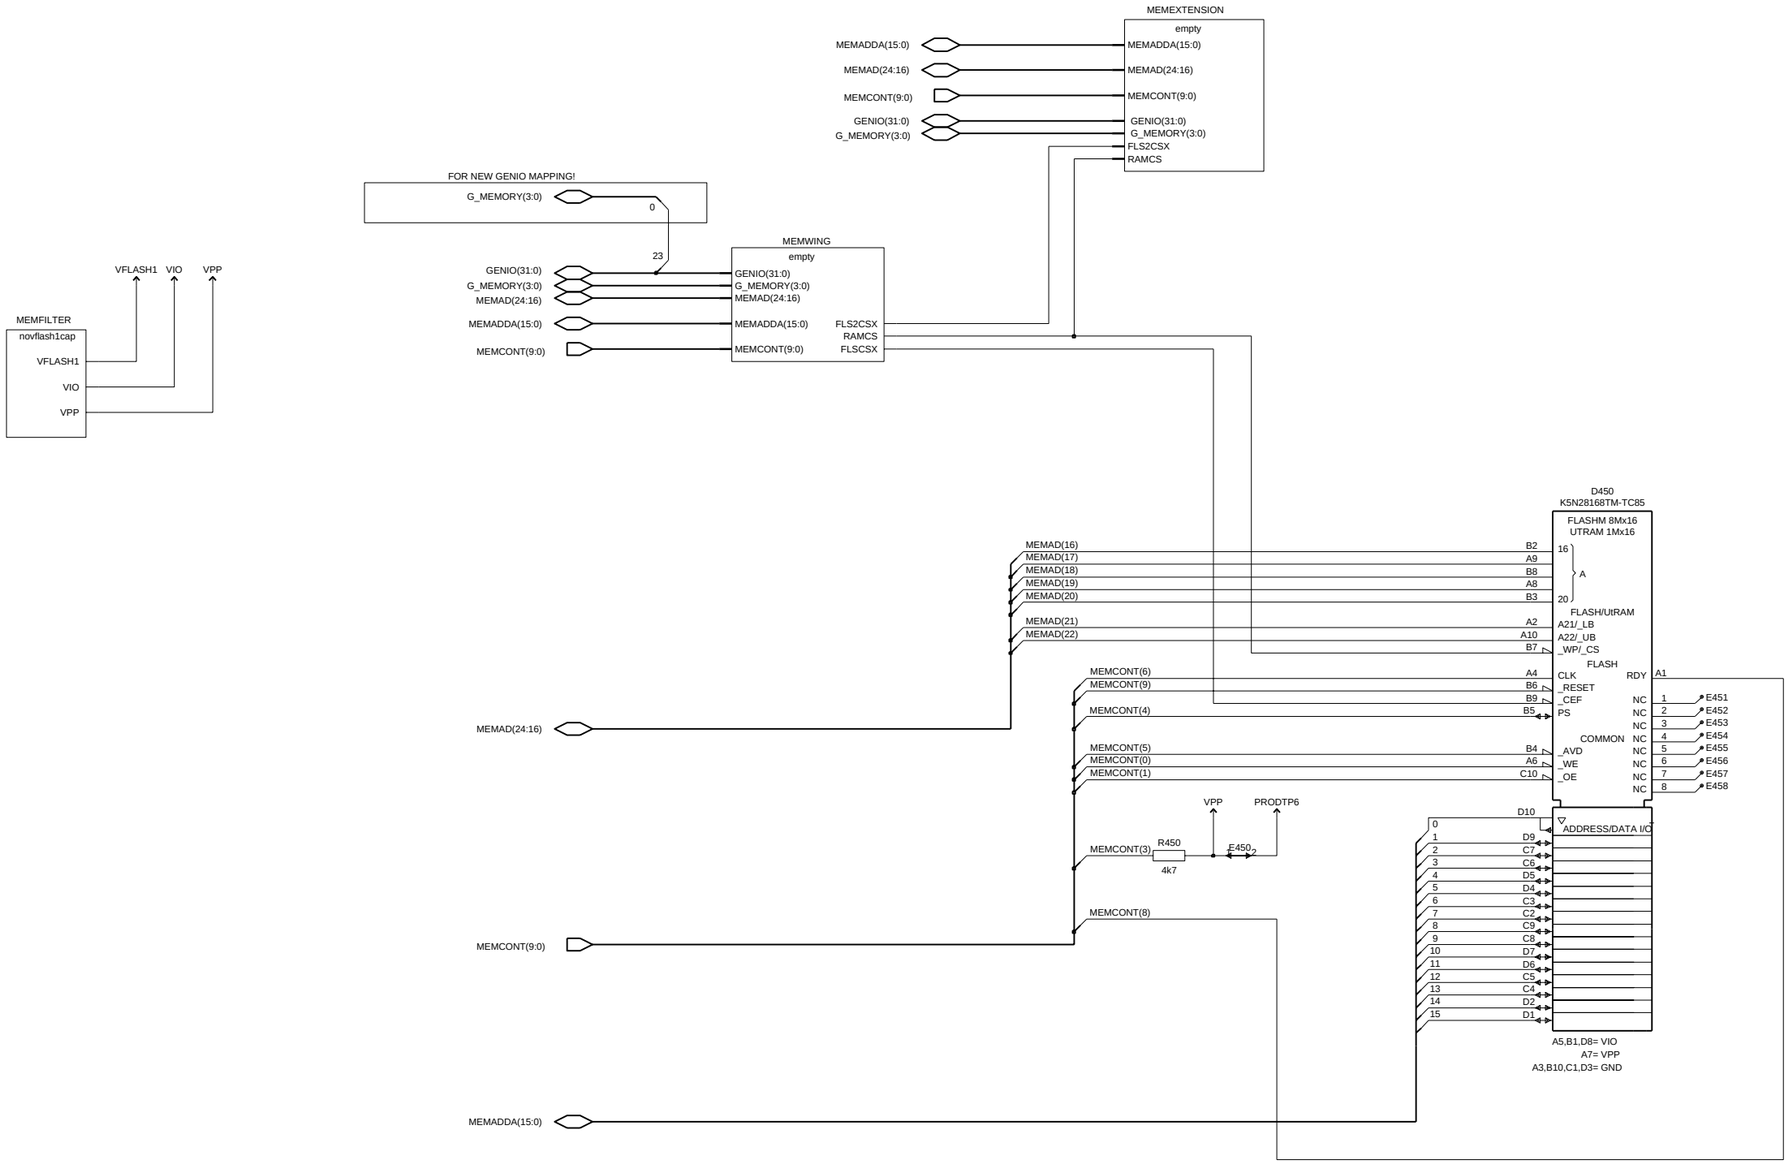

Copyright ©Nokia 2004. All rights reserved.

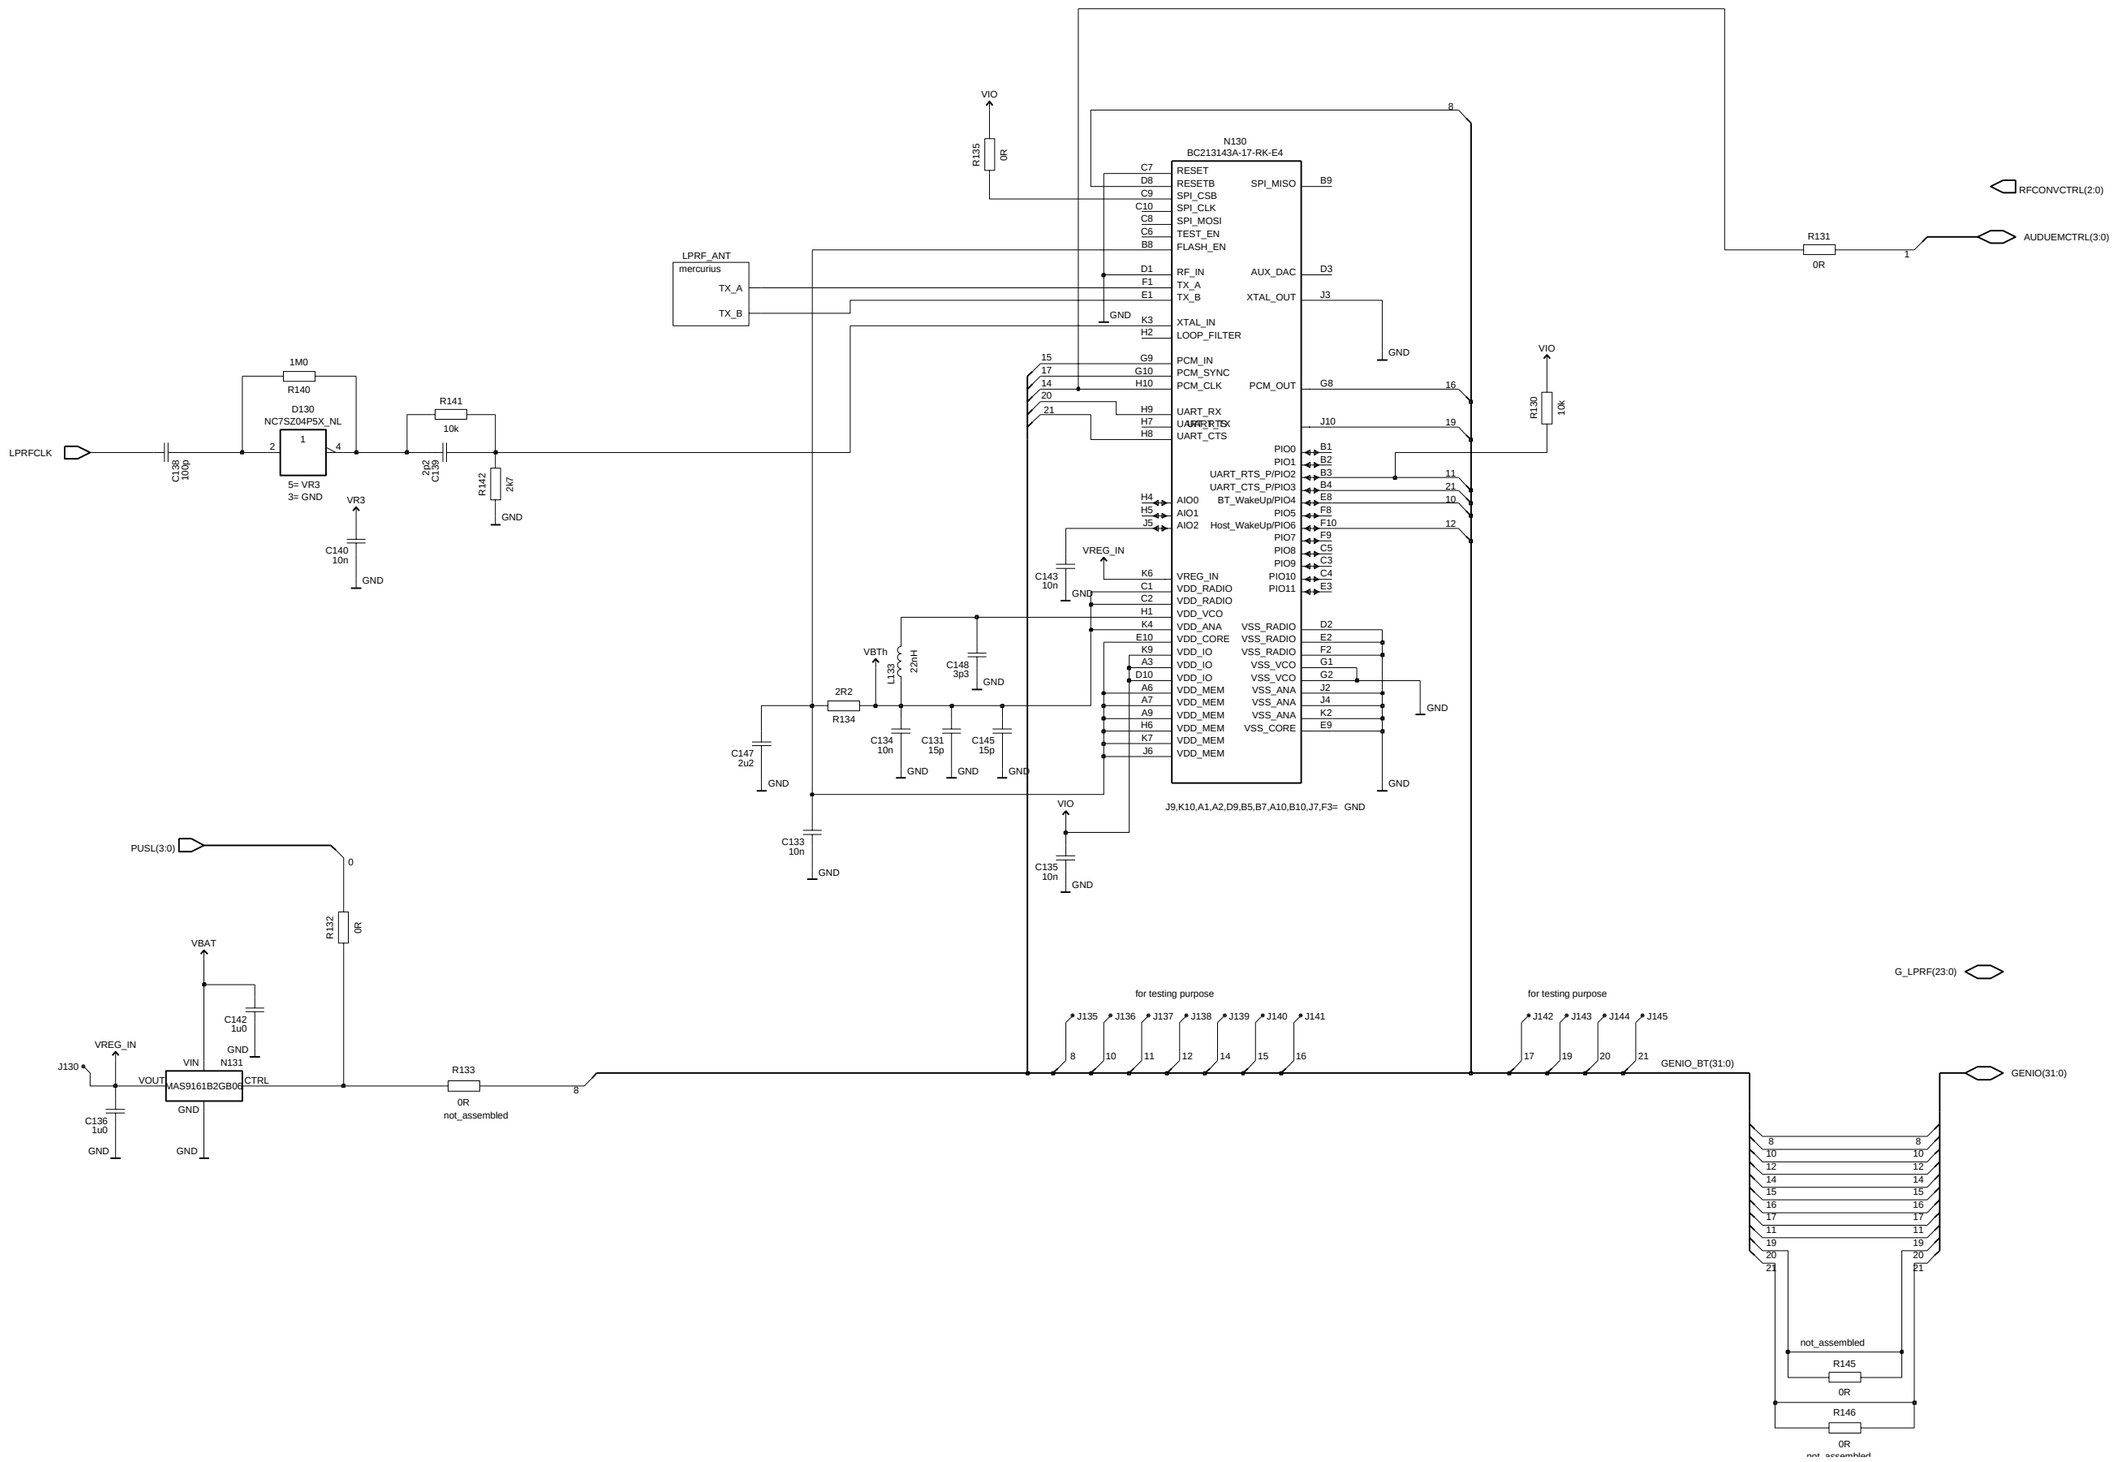

Copyright ©Nokia 2004. All rights reserved.

SIM Reader v.1.3 ed.52

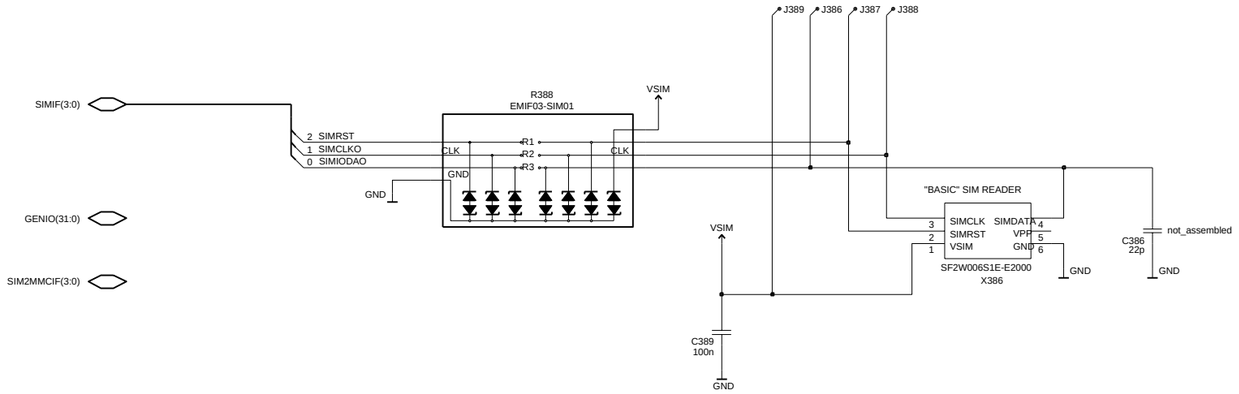

Copyright ©Nokia 2004. All rights reserved.

Discrete Power Management Diagram v. 1.3 ed.124

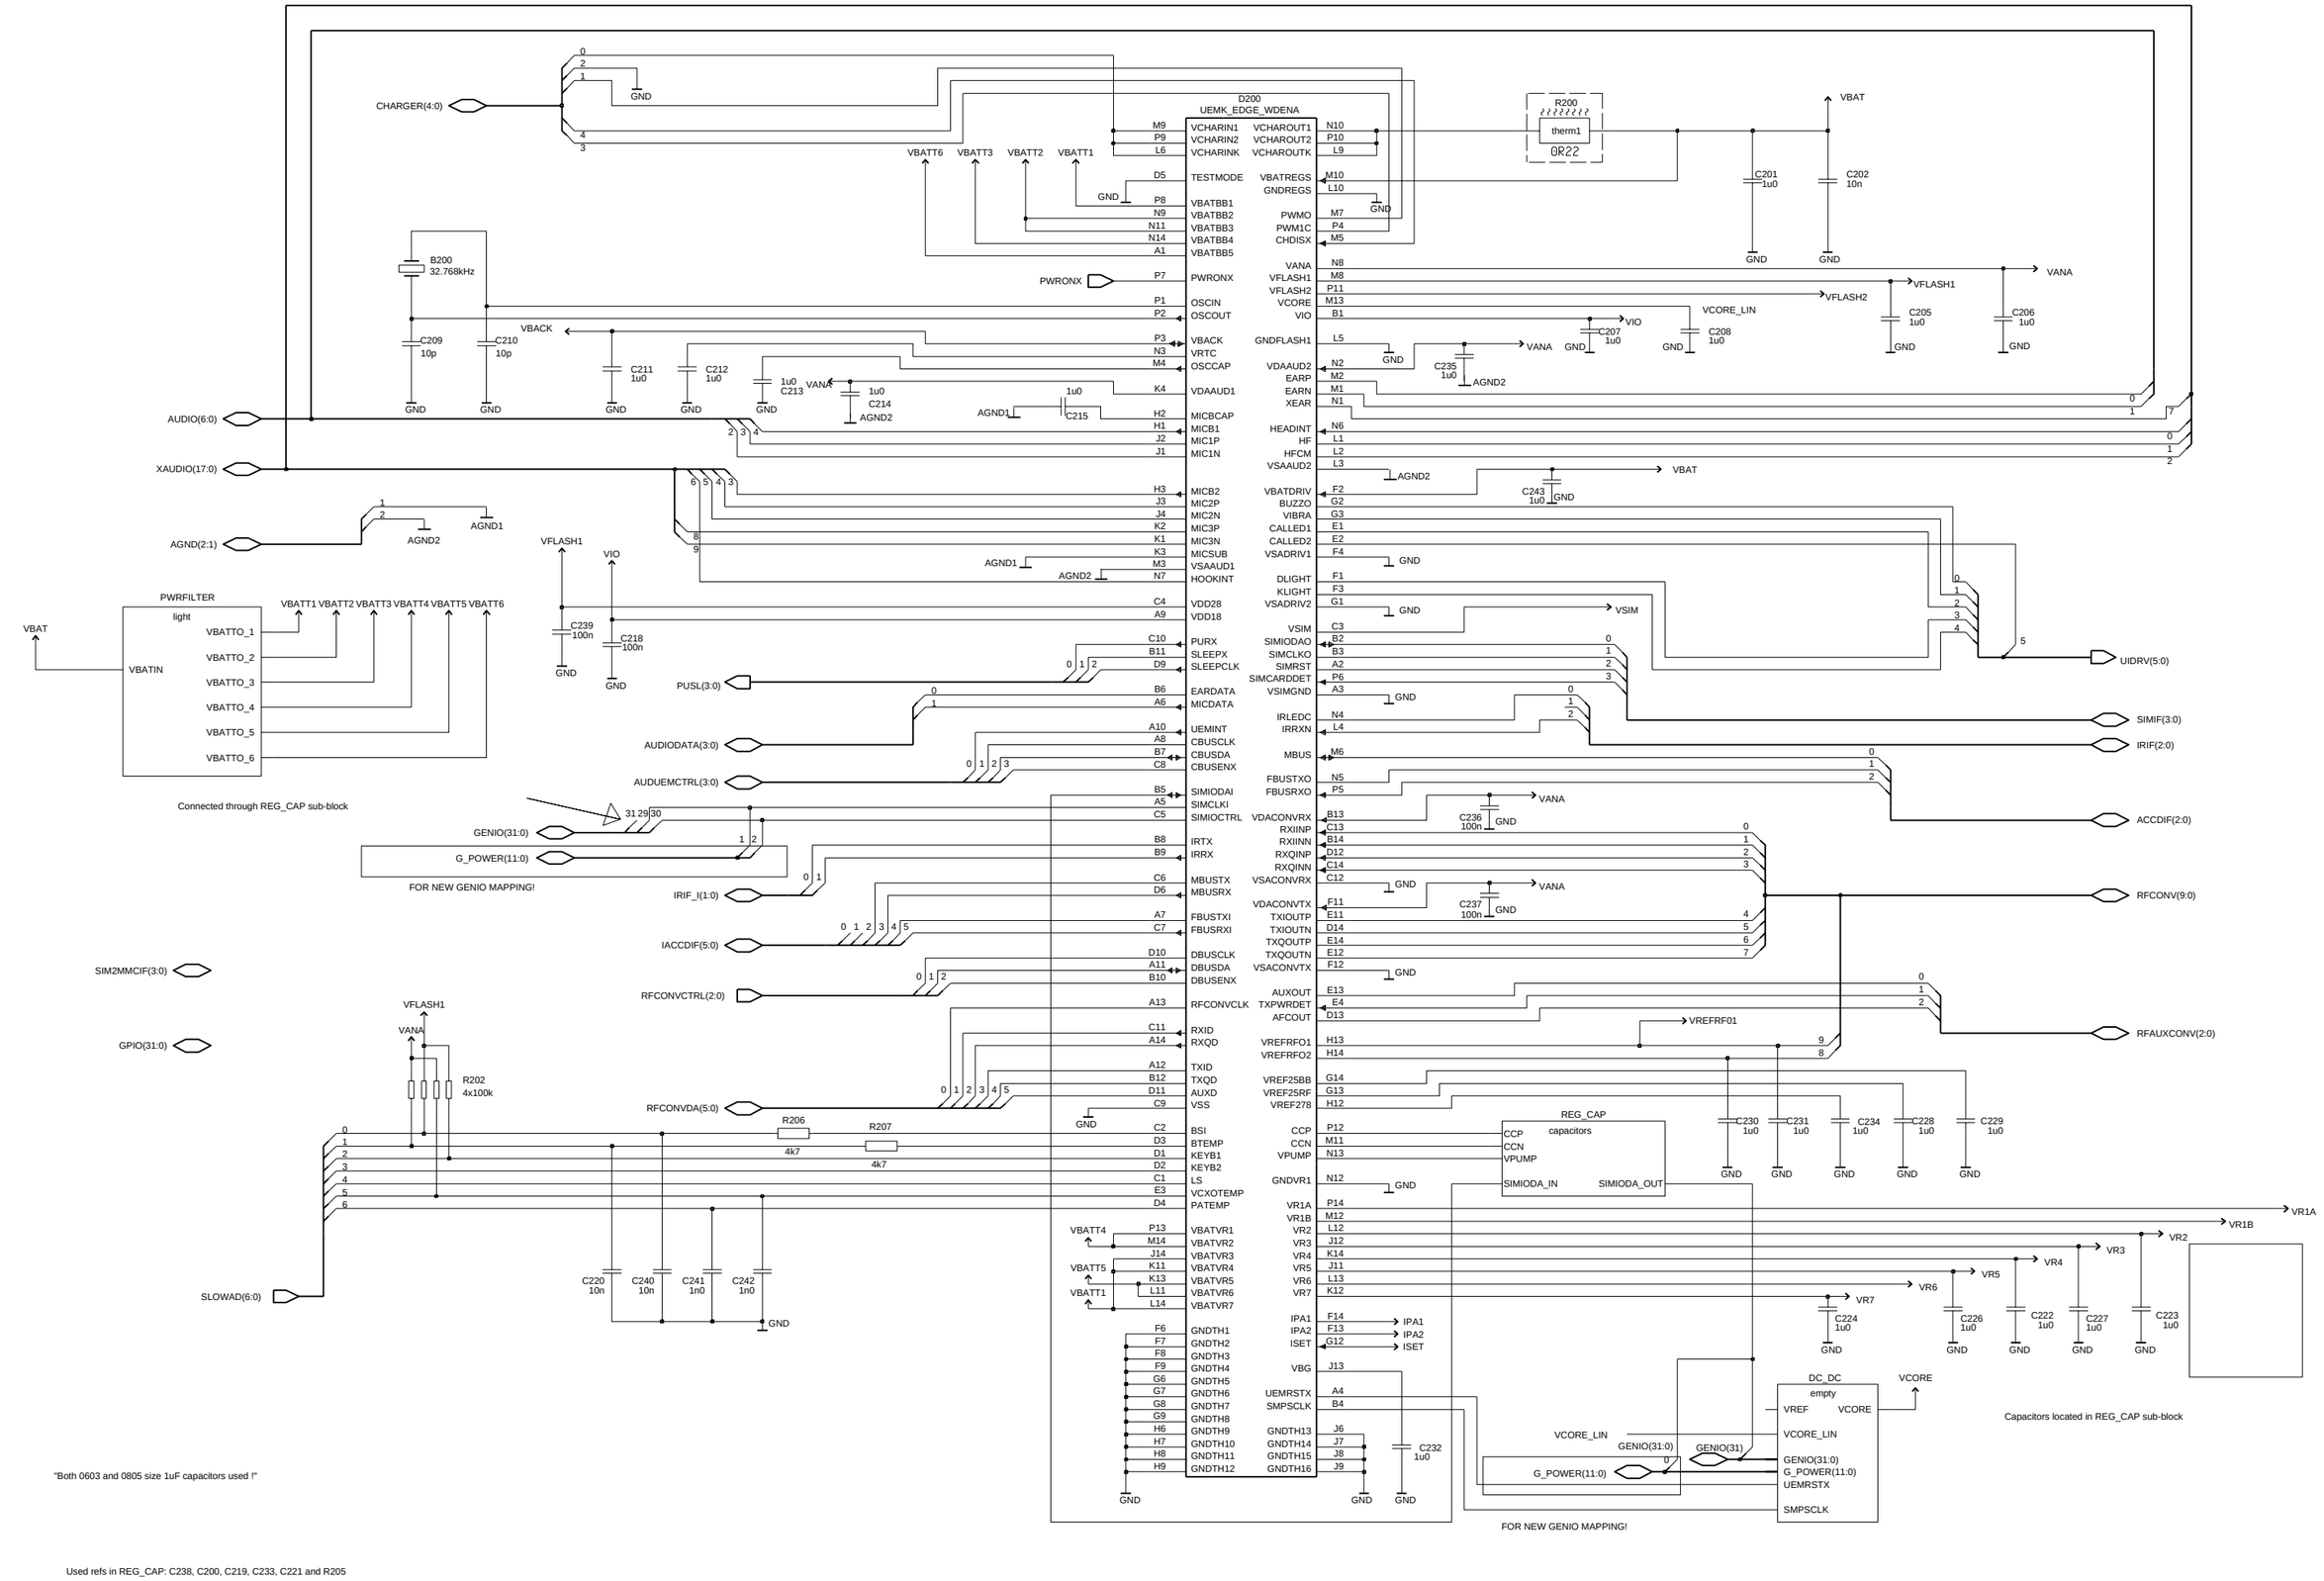

Copyright ©Nokia 2004. All rights reserved.

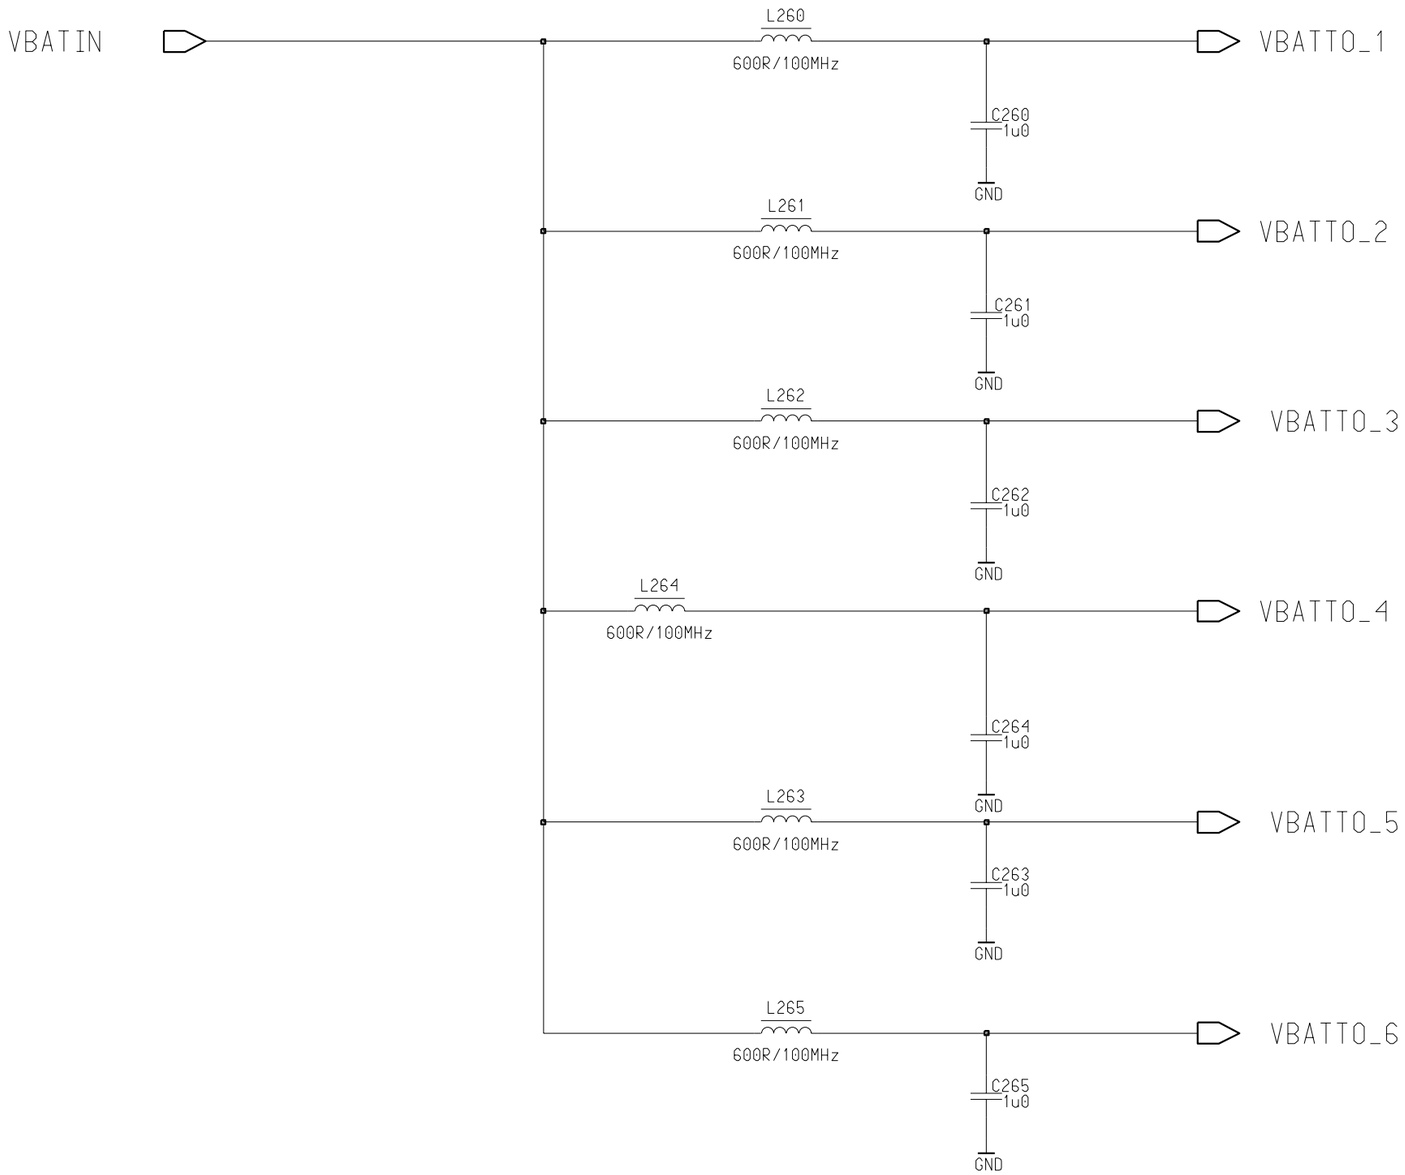

Copyright ©Nokia 2004. All rights reserved.

UPP 8M Diagram v. 2.0 ed.104

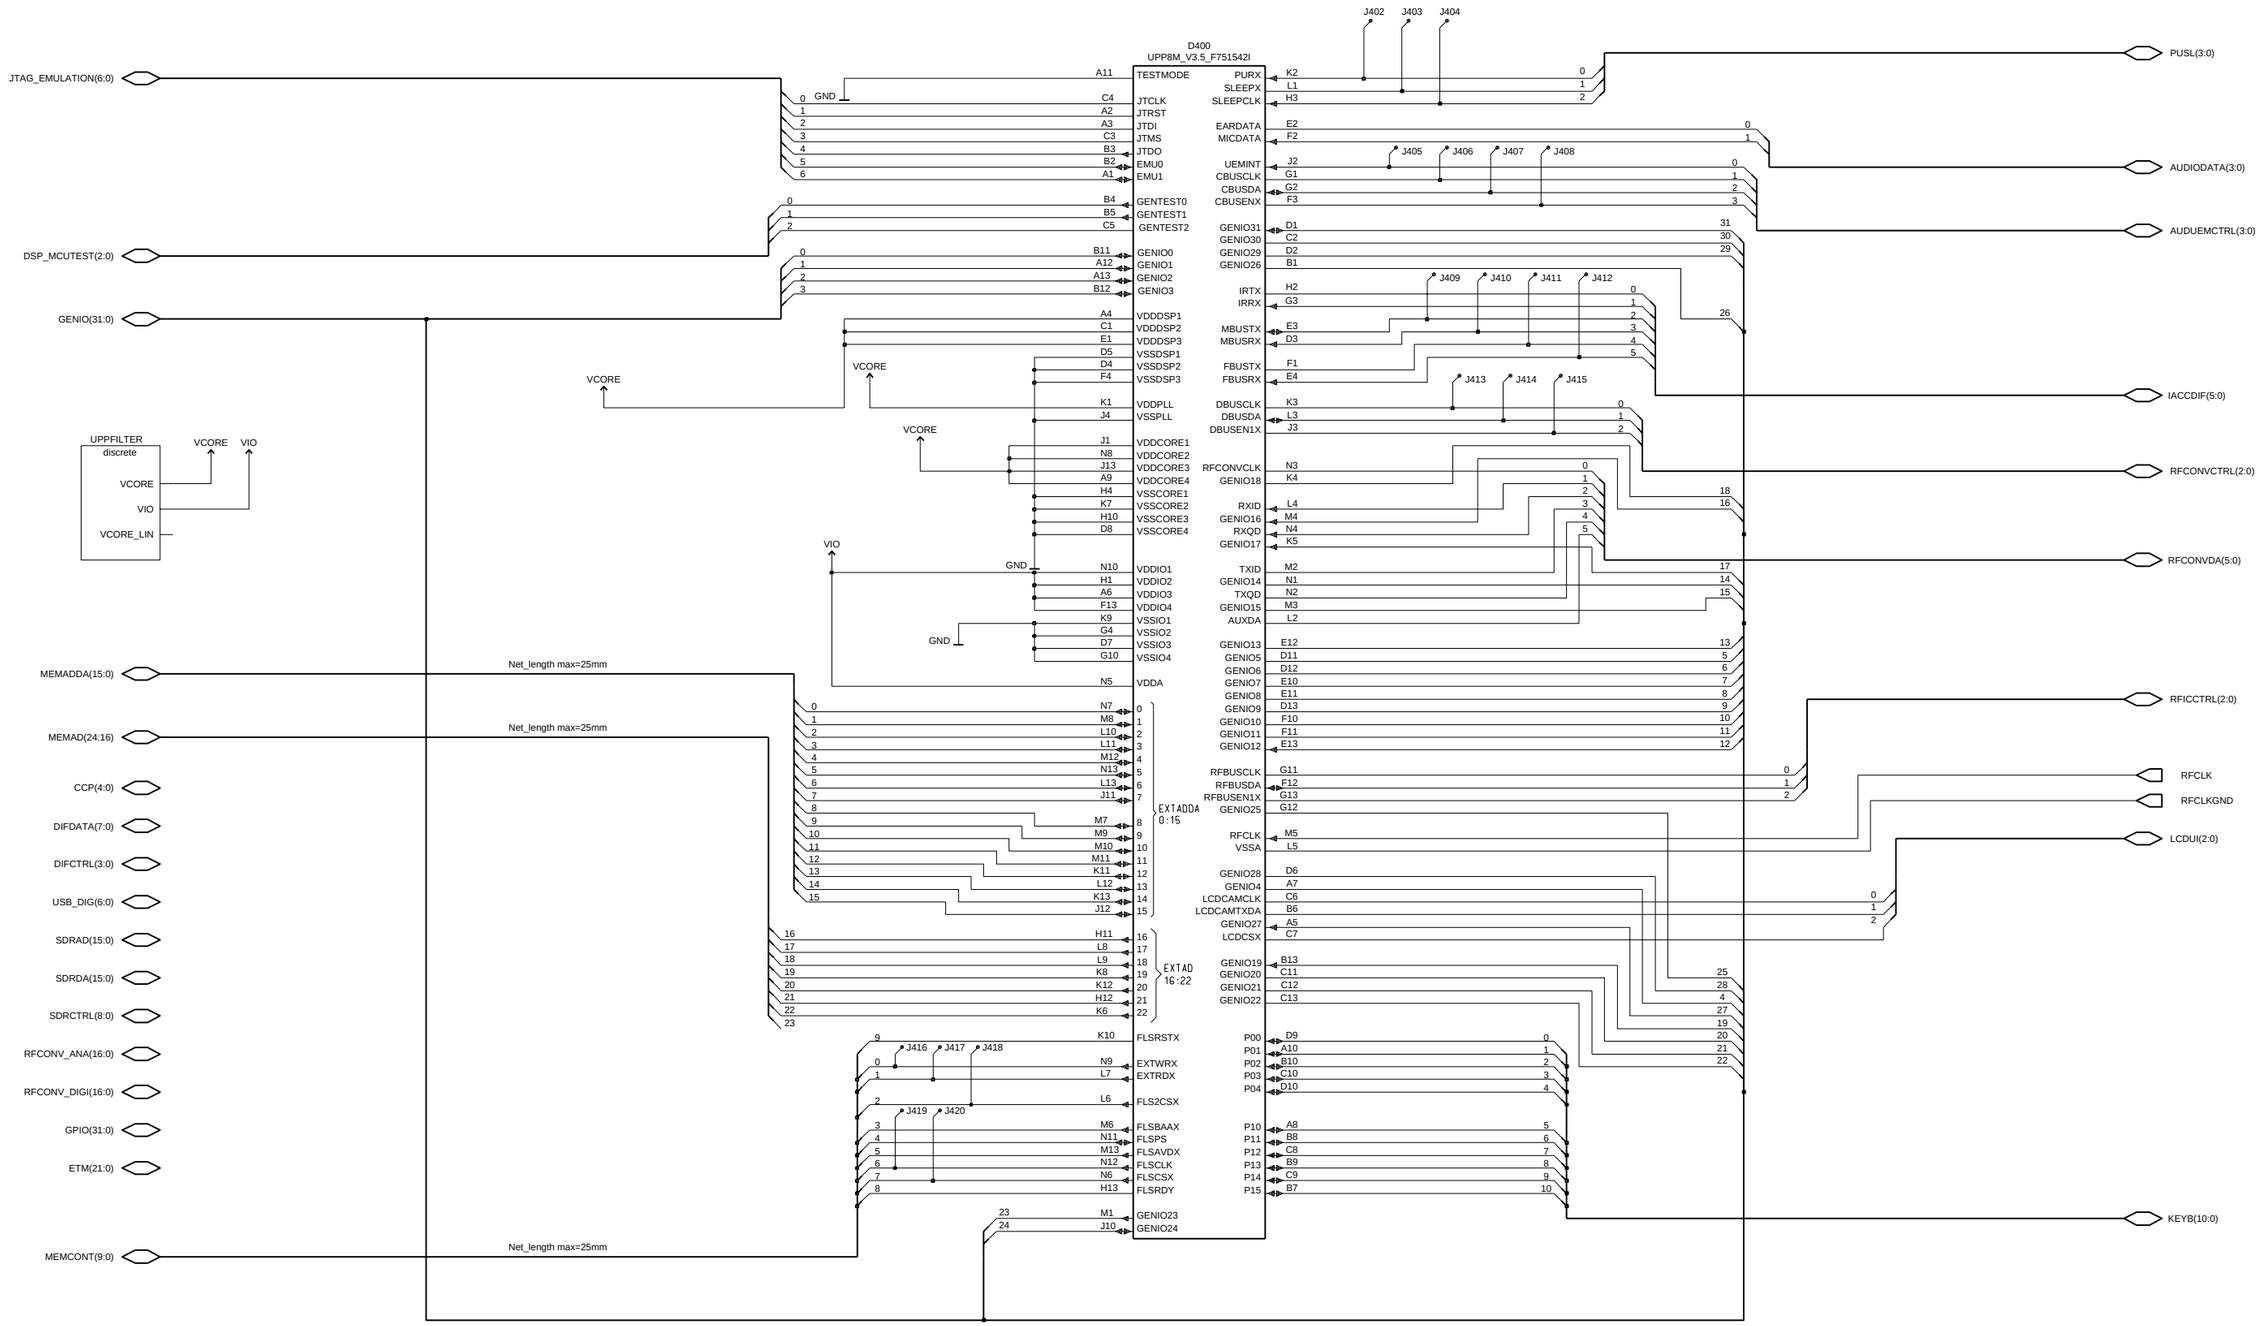

Copyright ©Nokia 2004. All rights reserved.

UPP Decoupling Capacitors Diagram v. 1.3 ed. 10

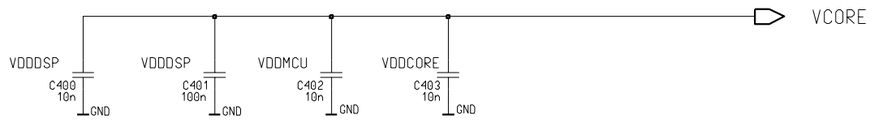

VCORE_LIN



Copyright ©Nokia 2004. All rights reserved.

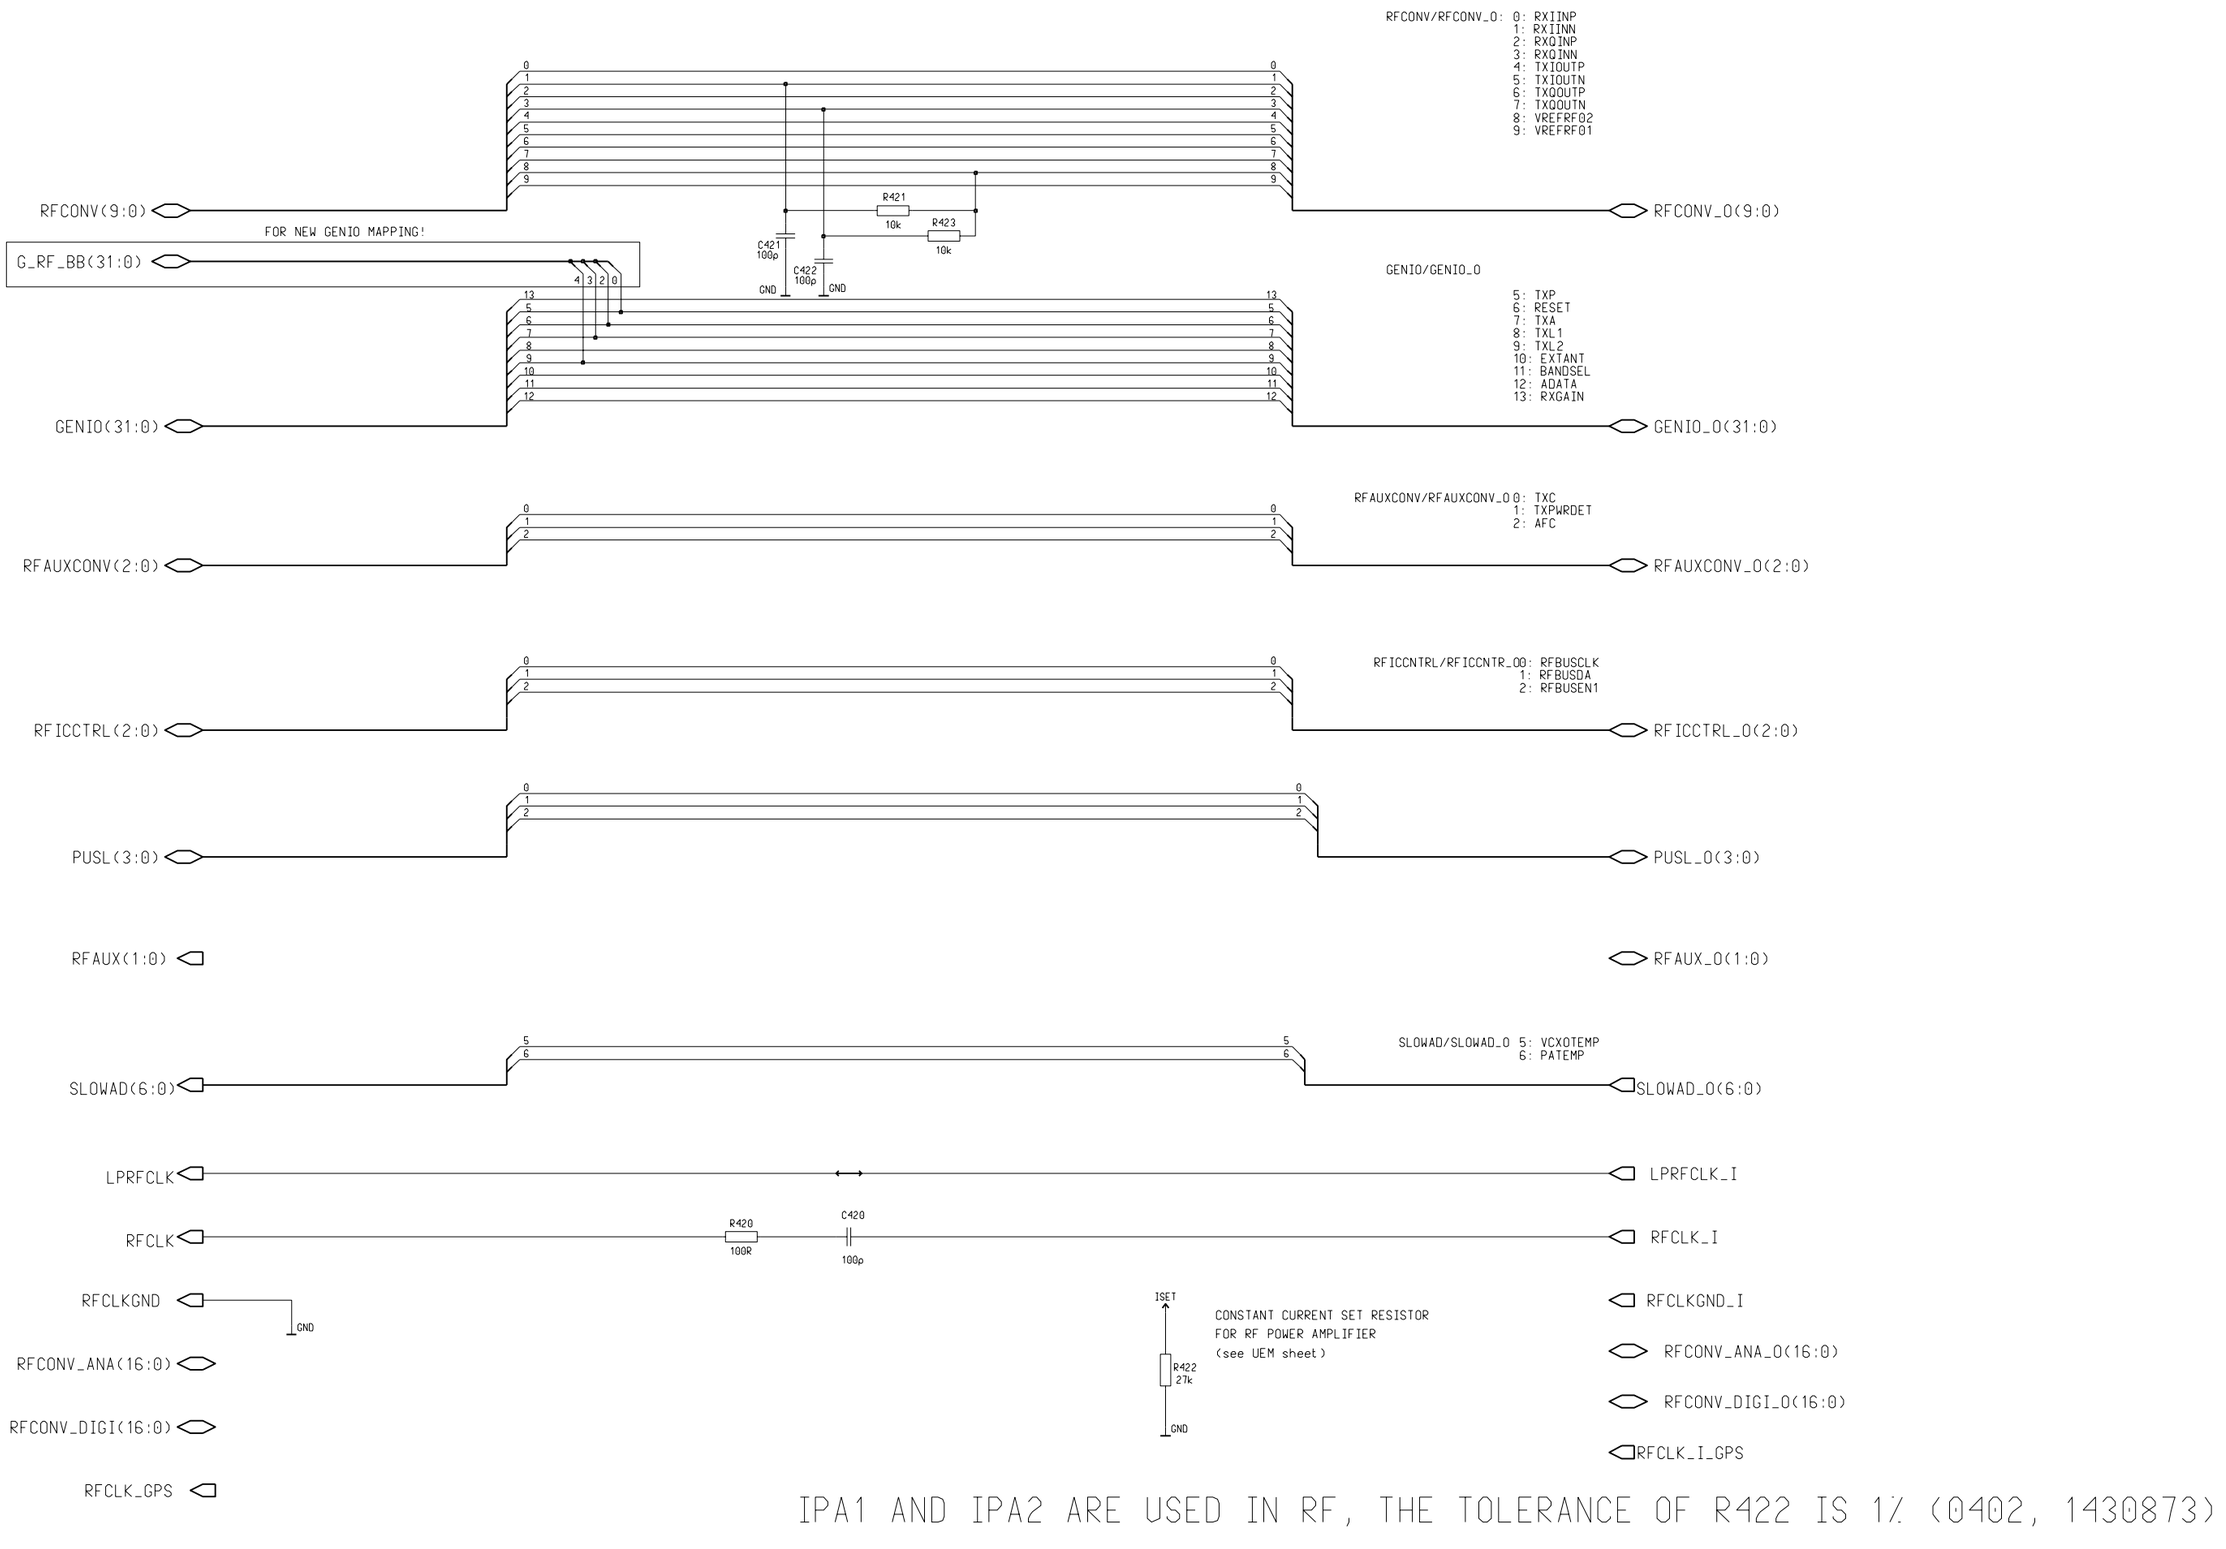

IPA1 AND IPA2 ARE USED IN RF, THE TOLERANCE OF R422 IS 1% (0402, 1430873)

Copyright ©Nokia 2004. All rights reserved.

System Connector Diagram v. 0.0 ed. 2

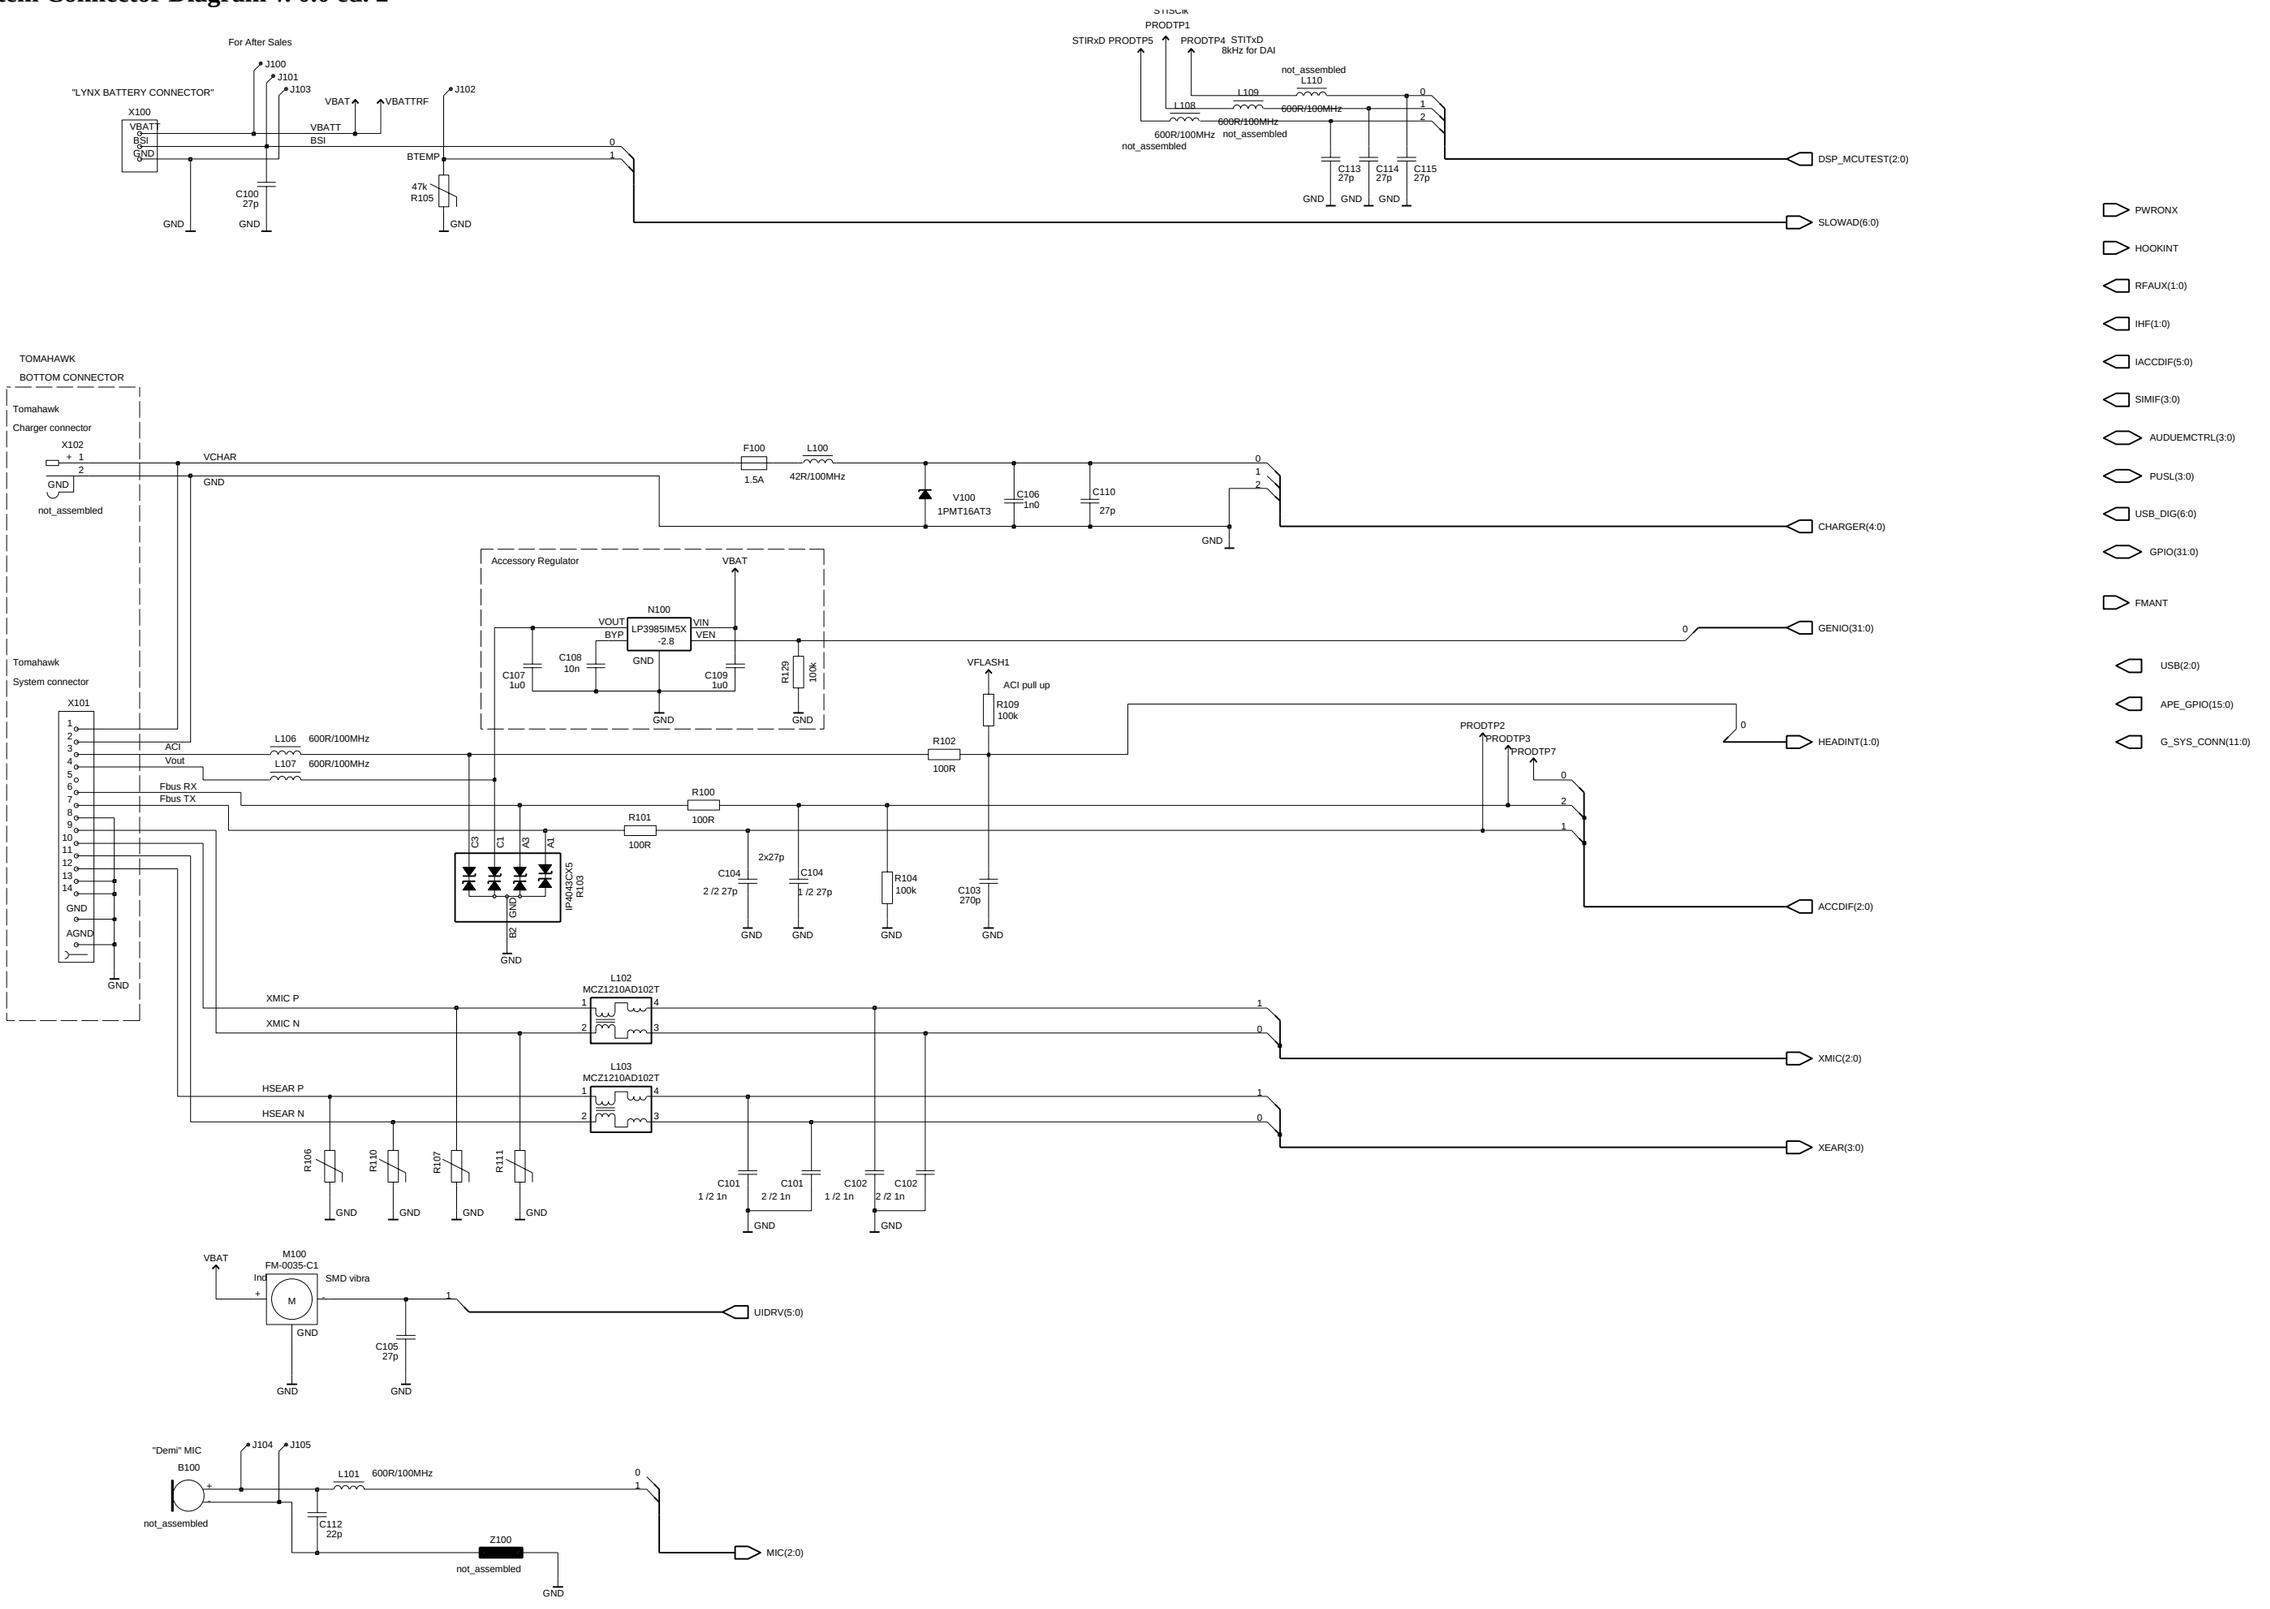

Copyright ©Nokia 2004. All rights reserved.

Audio Diagram v.0.0 ed. 51

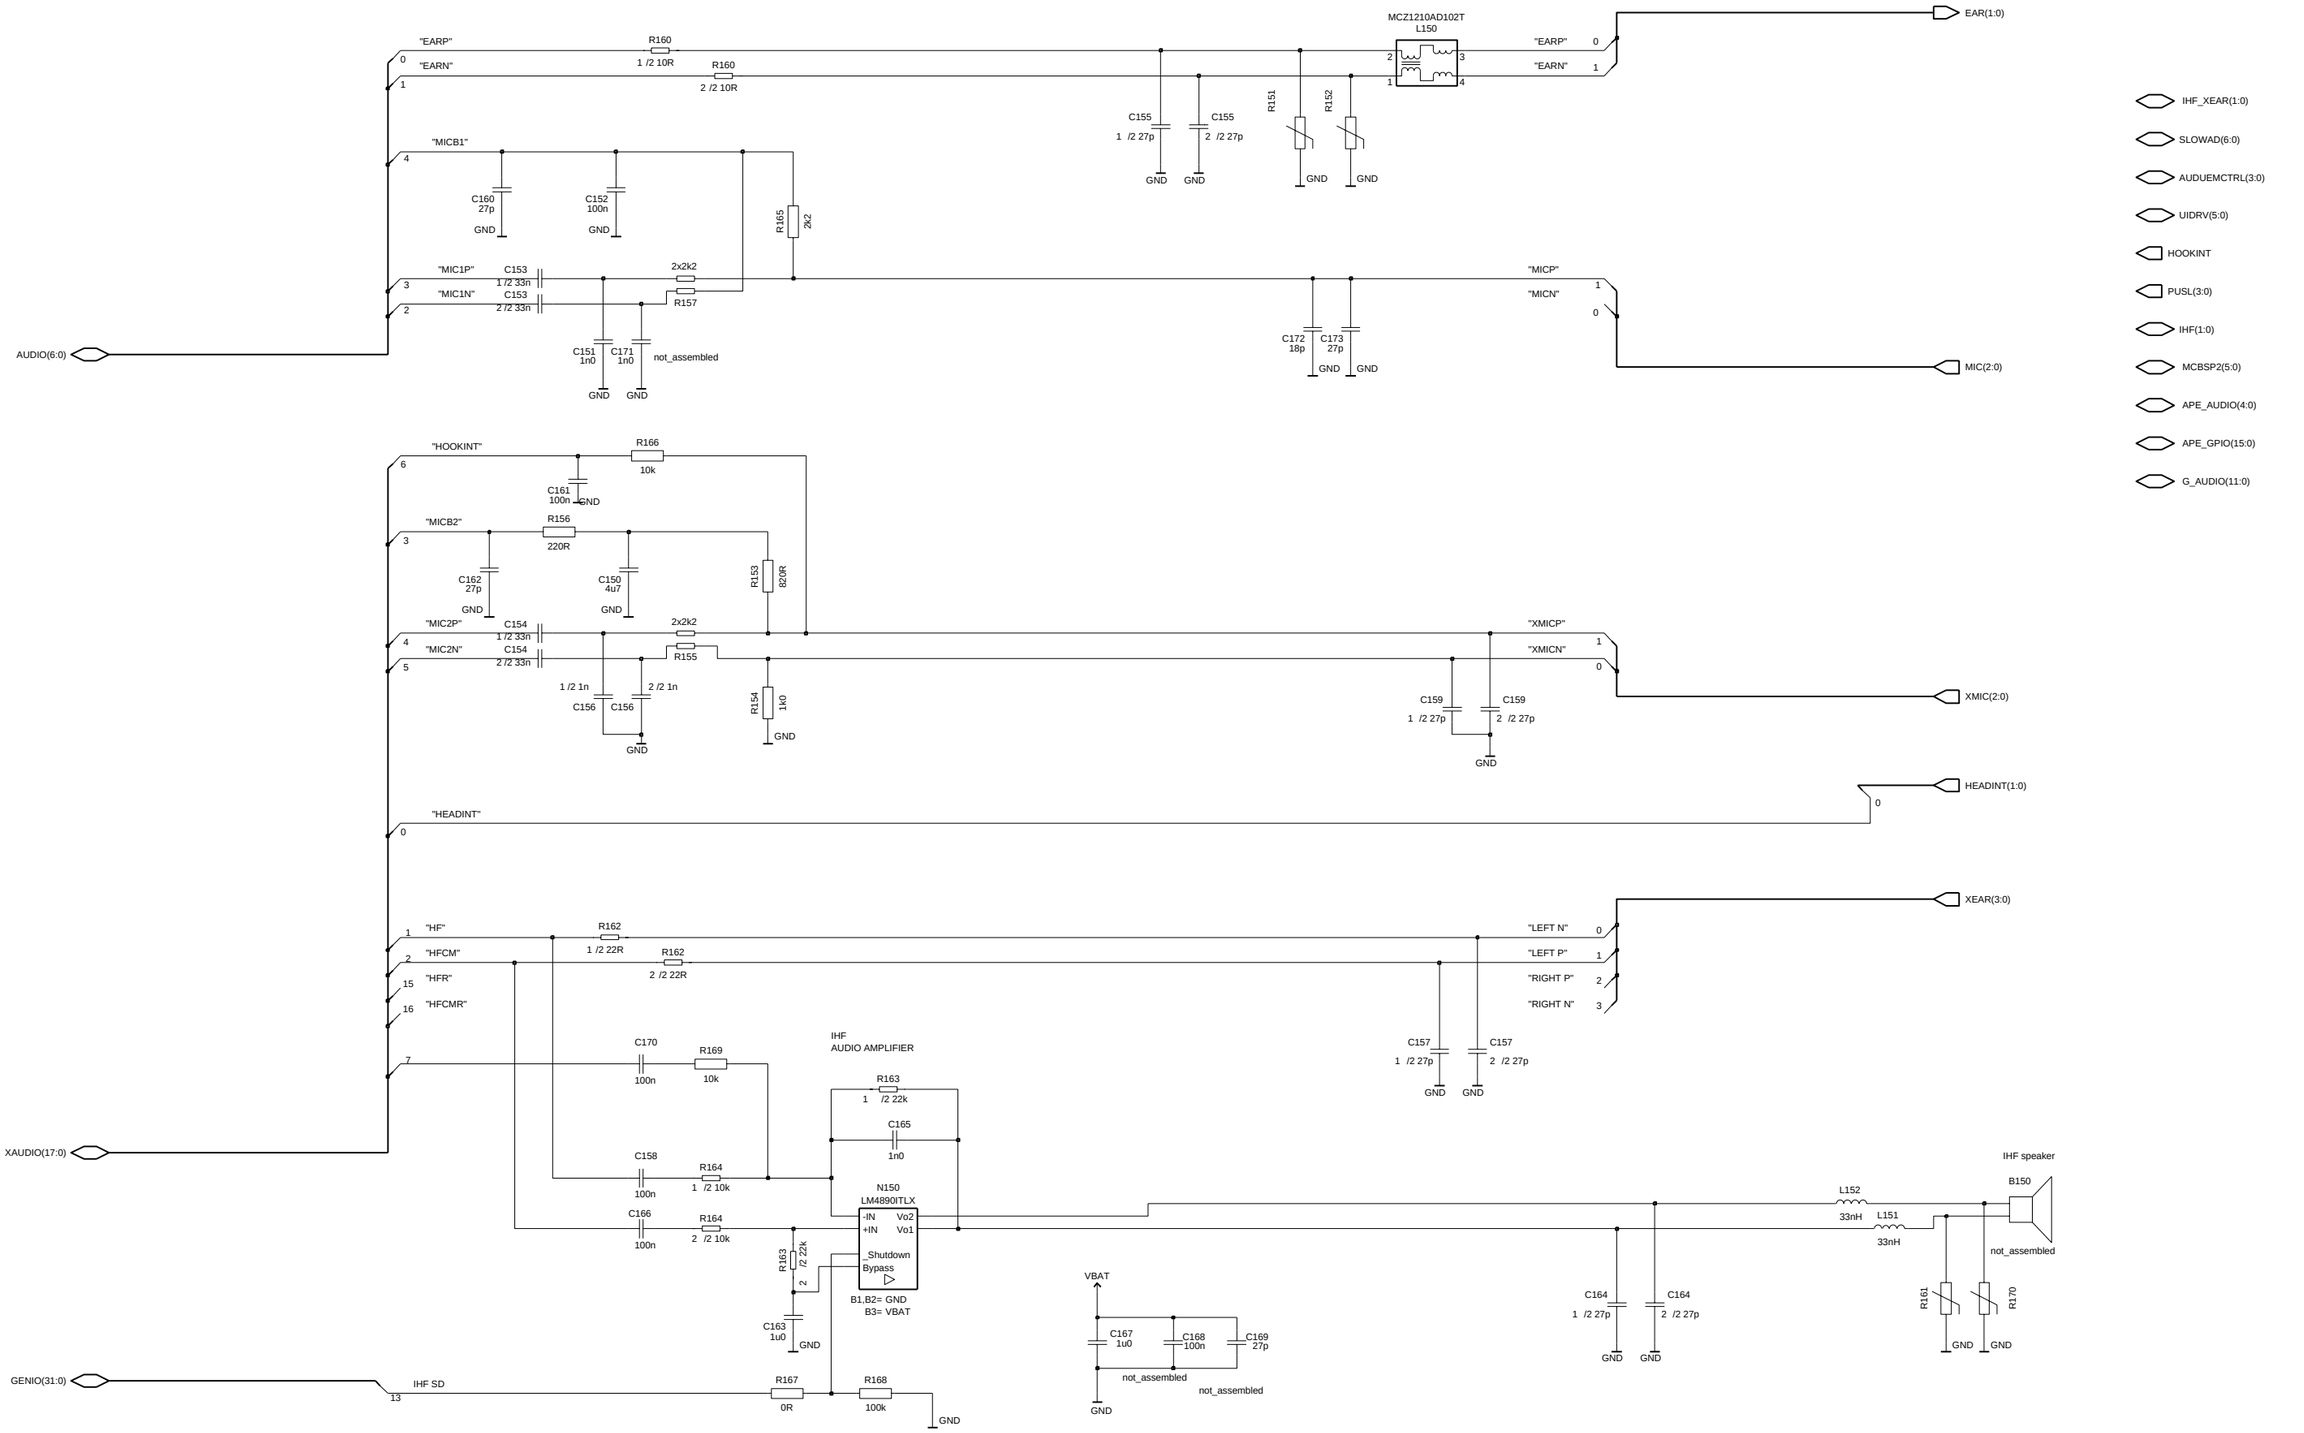

Copyright ©Nokia 2004. All rights reserved.

IR Diagram v. 0.0 ed.49

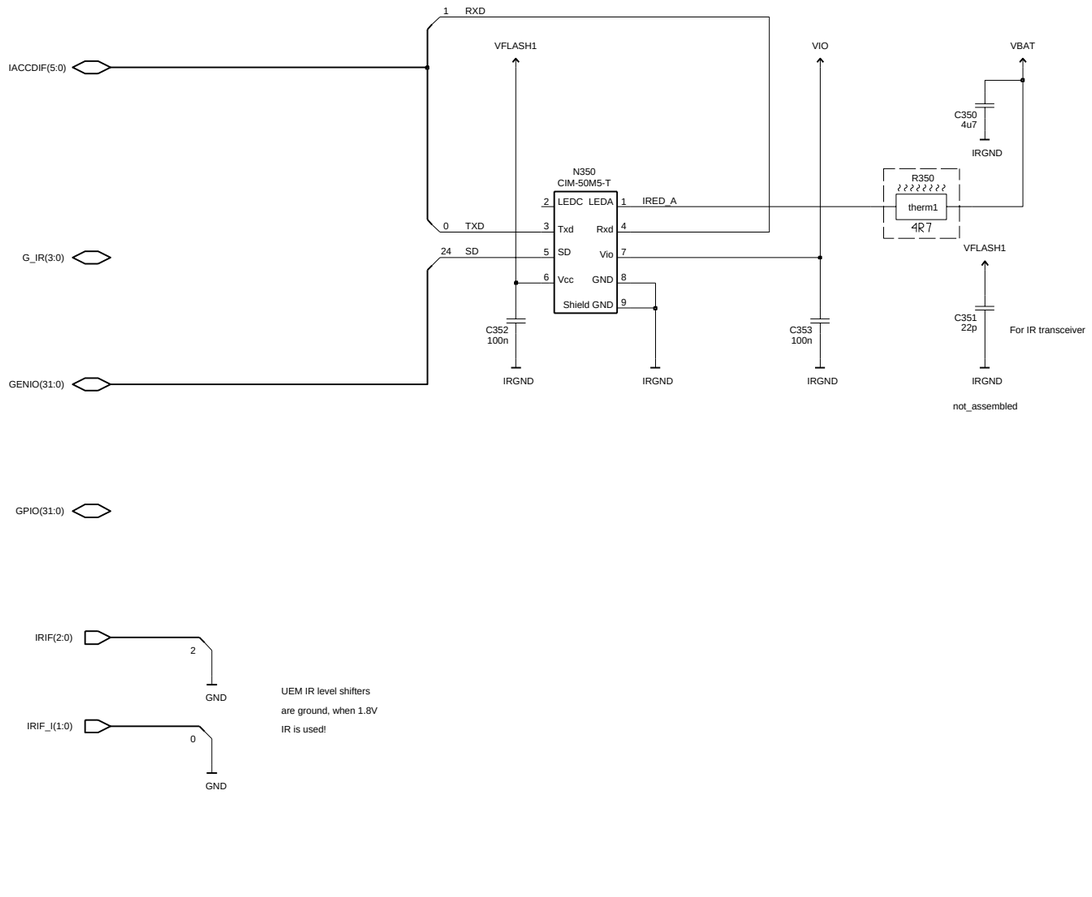

Copyright ©Nokia 2004. All rights reserved.

User Interface Diagram v.0.0 ed.119

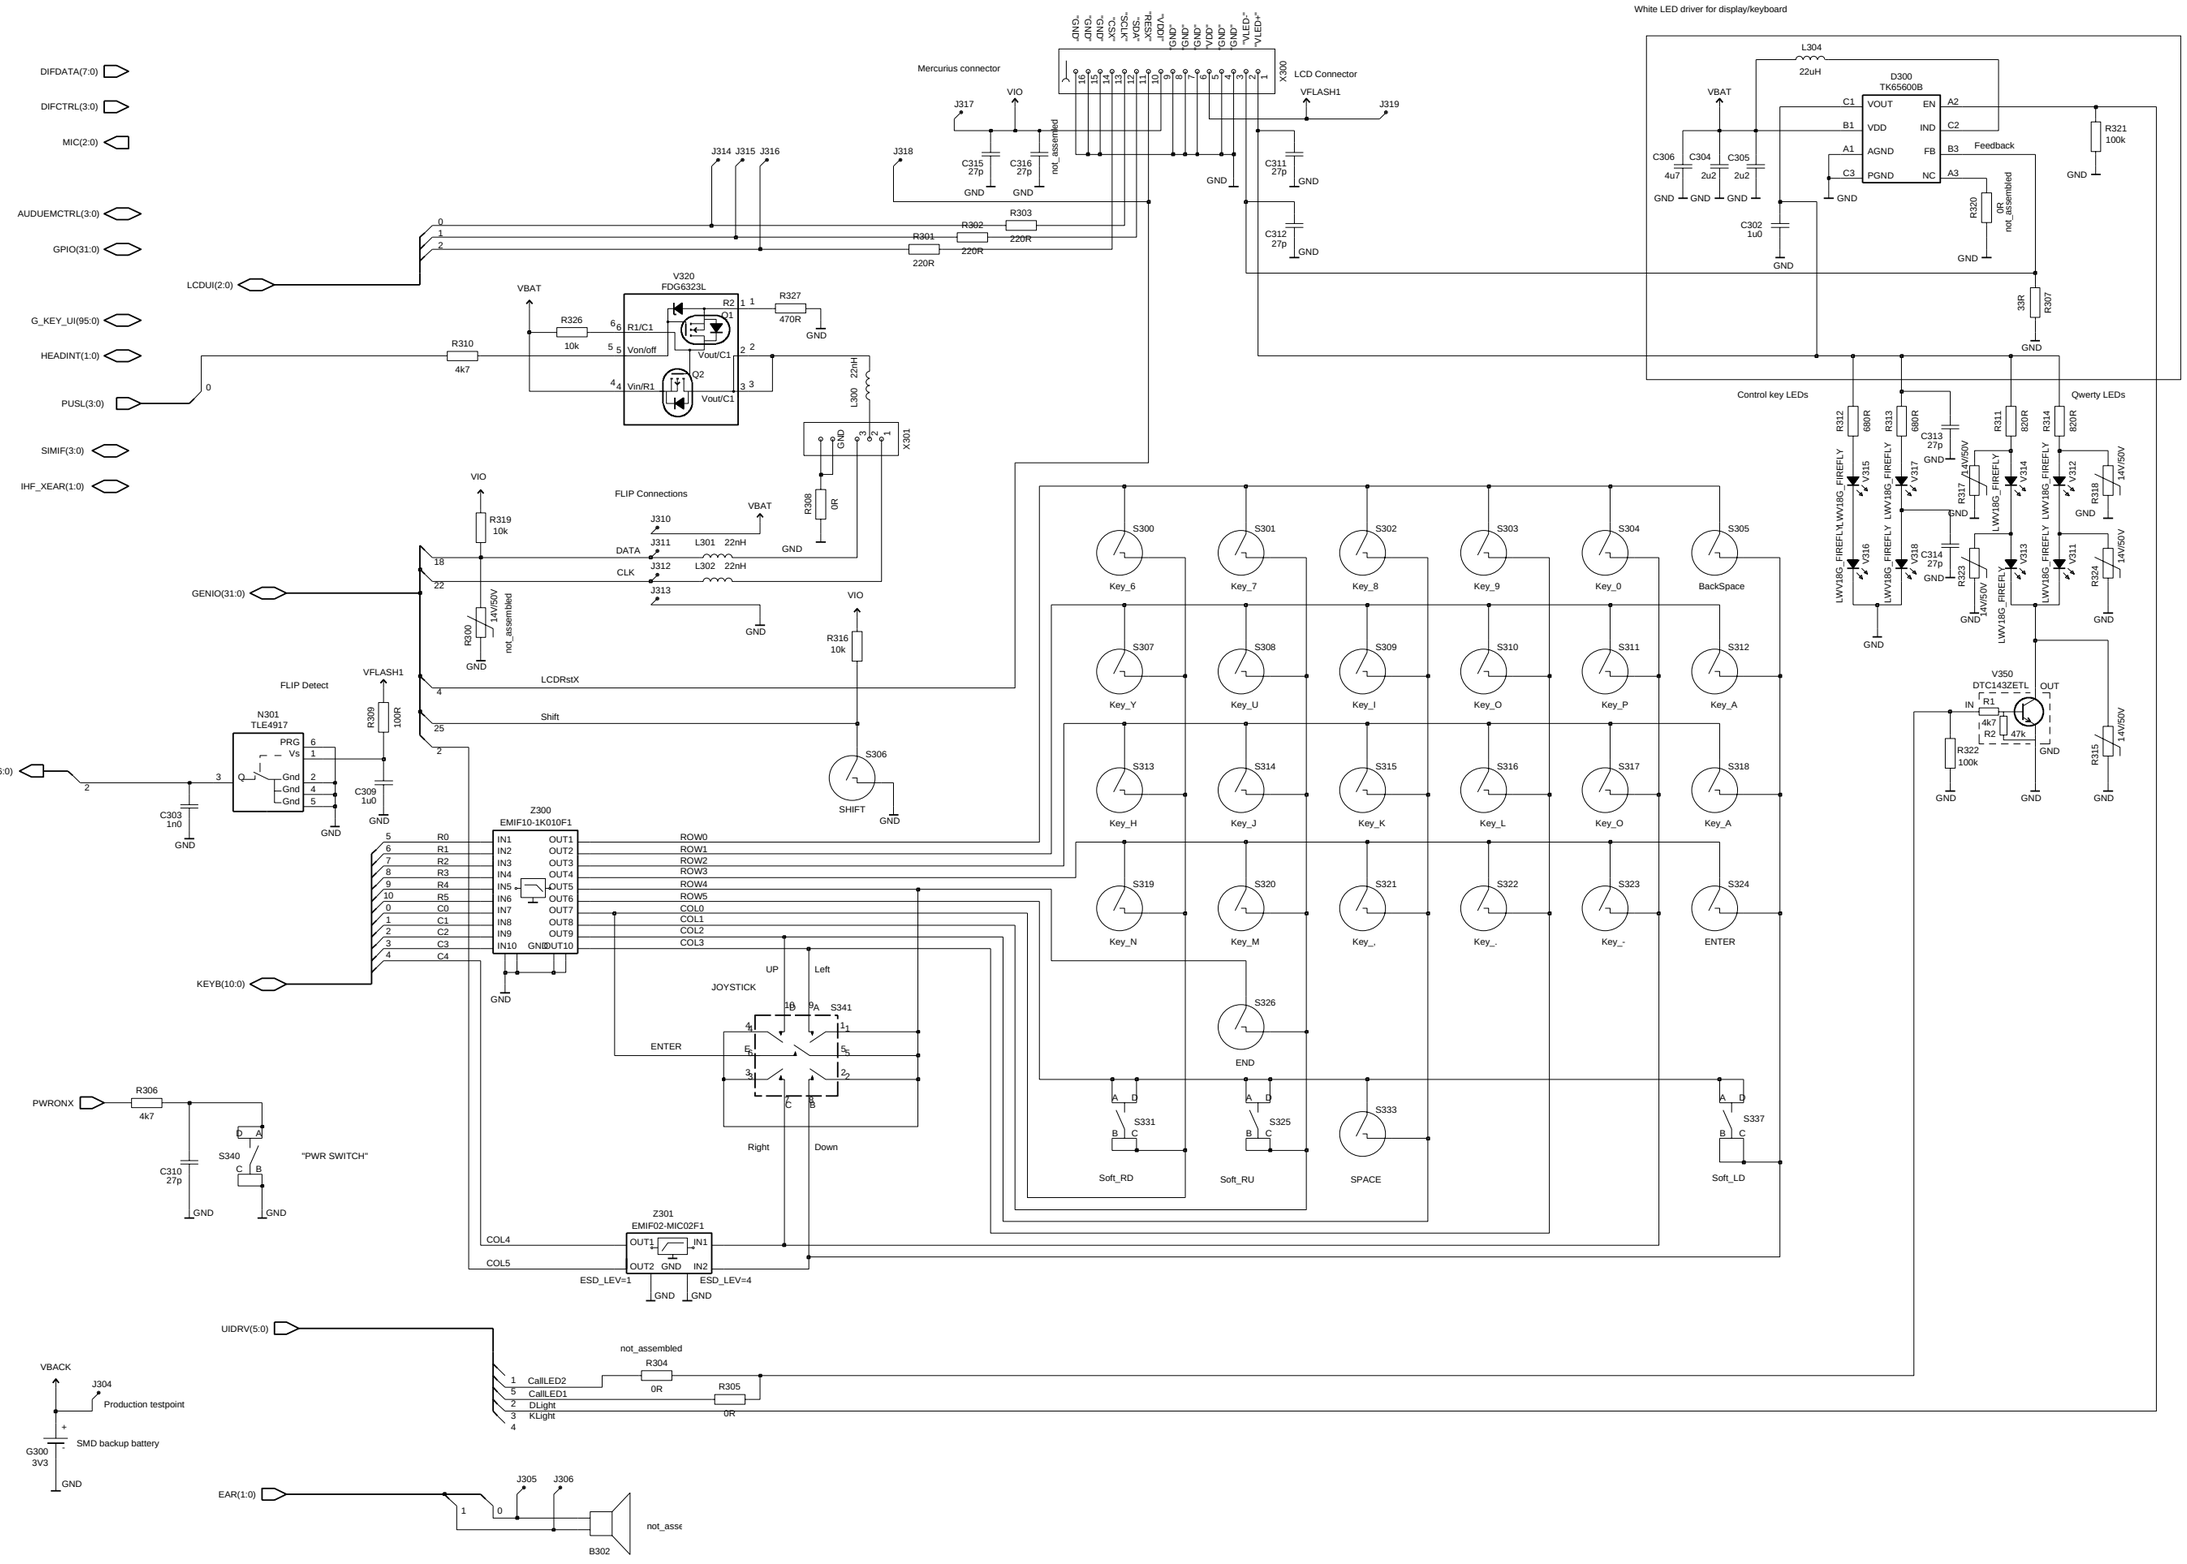

Copyright ©Nokia 2004. All rights reserved.

LPRF Antenna Diagram v. 0.0 ed.21

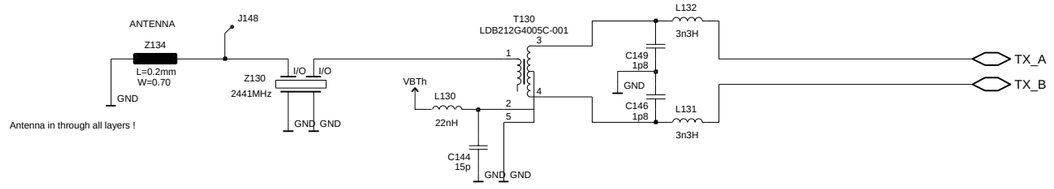

Copyright ©Nokia 2004. All rights reserved.

Parts Placement Diagram TB6_17a top

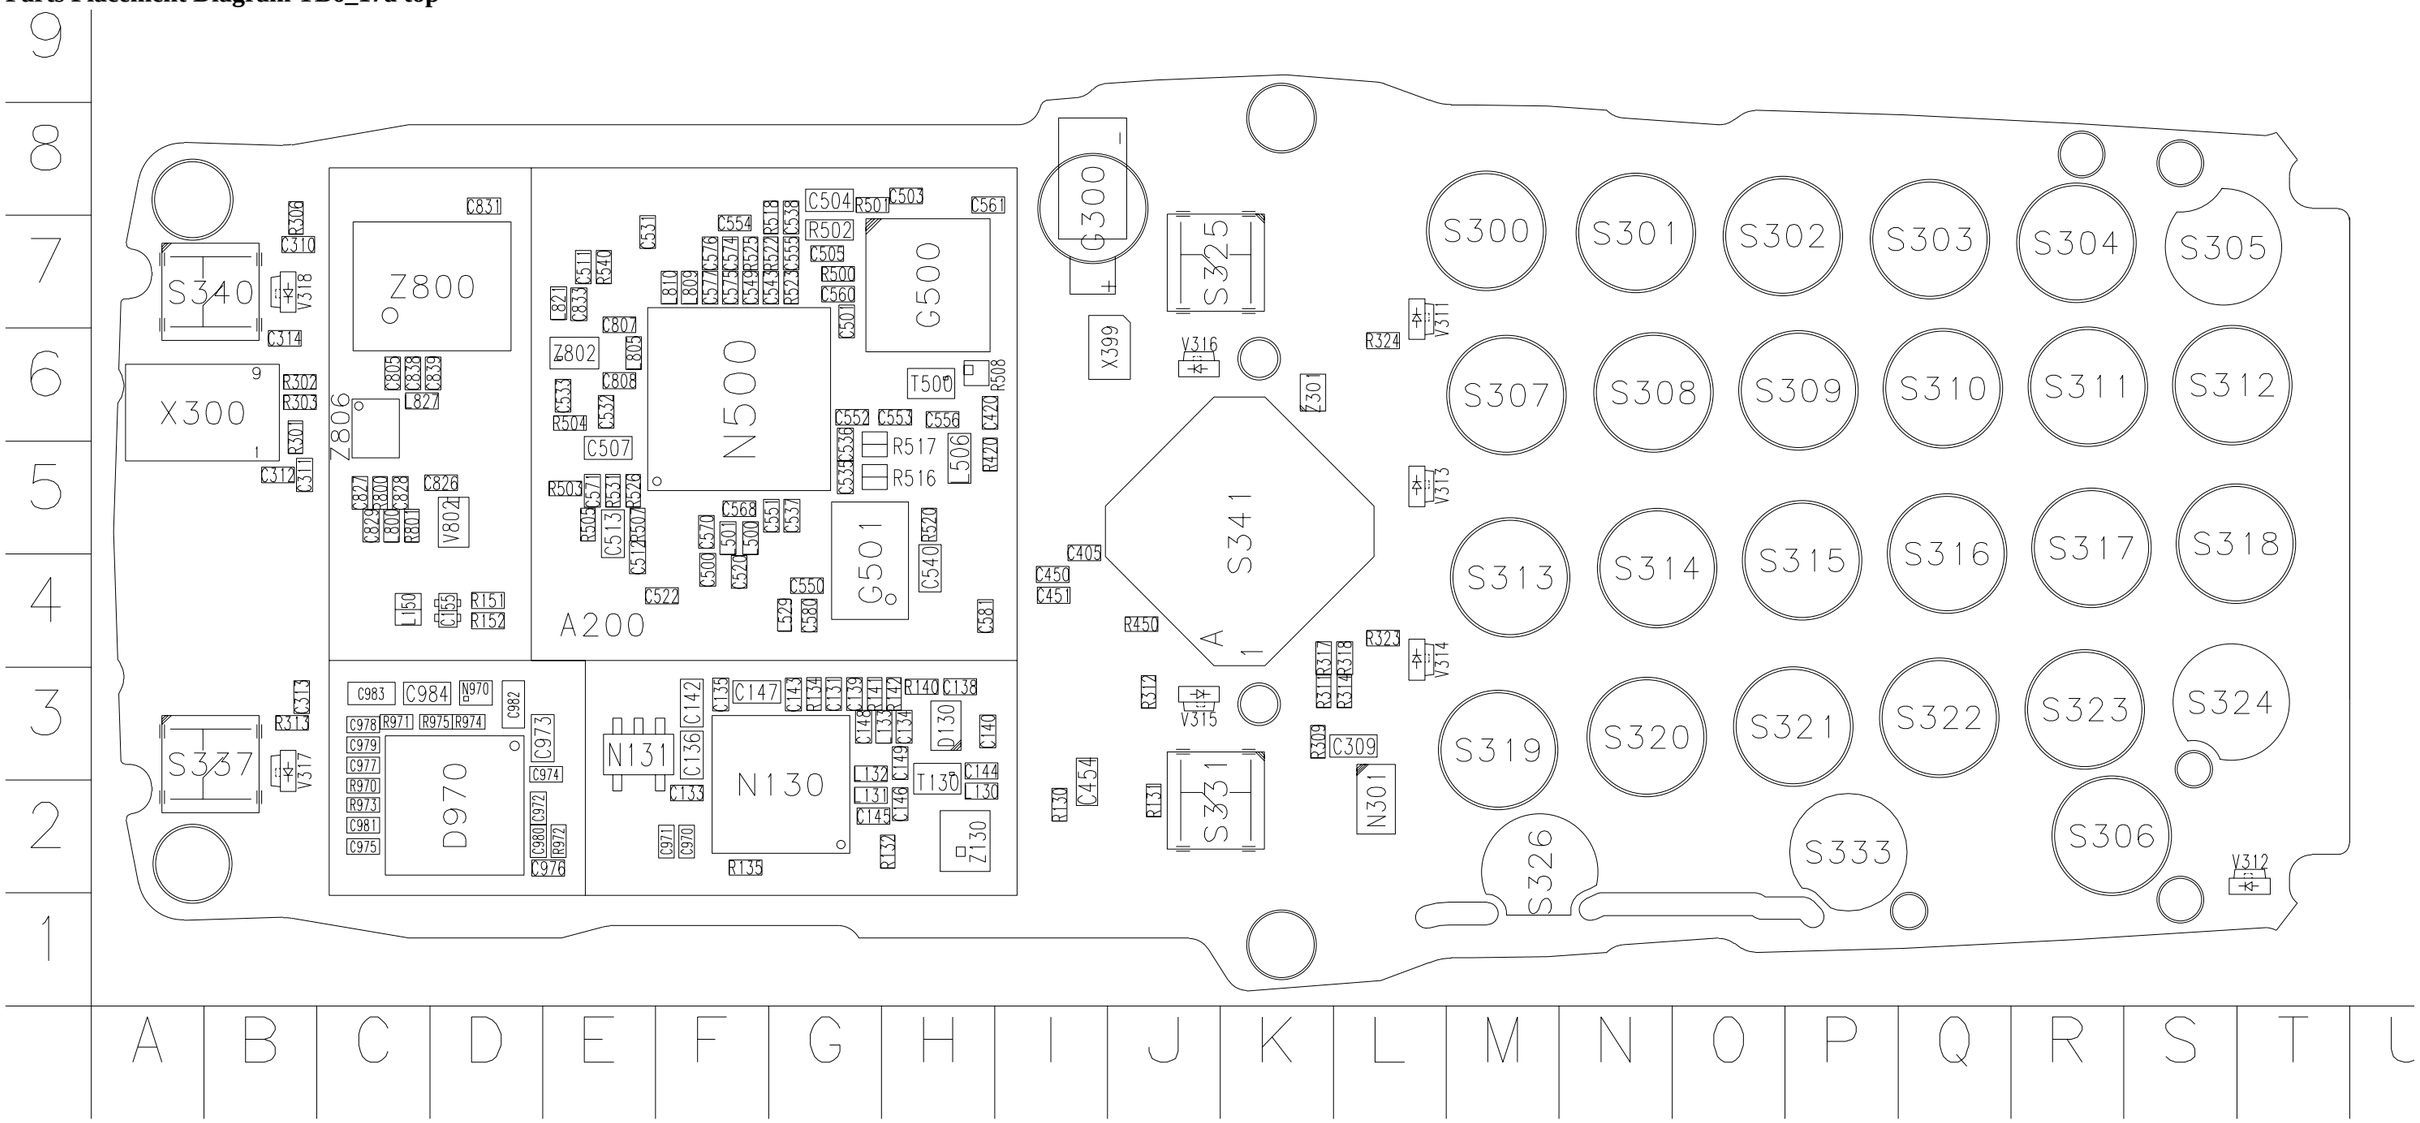

Copyright ©Nokia 2004. All rights reserved.

Parts Placement Diagram Bottom

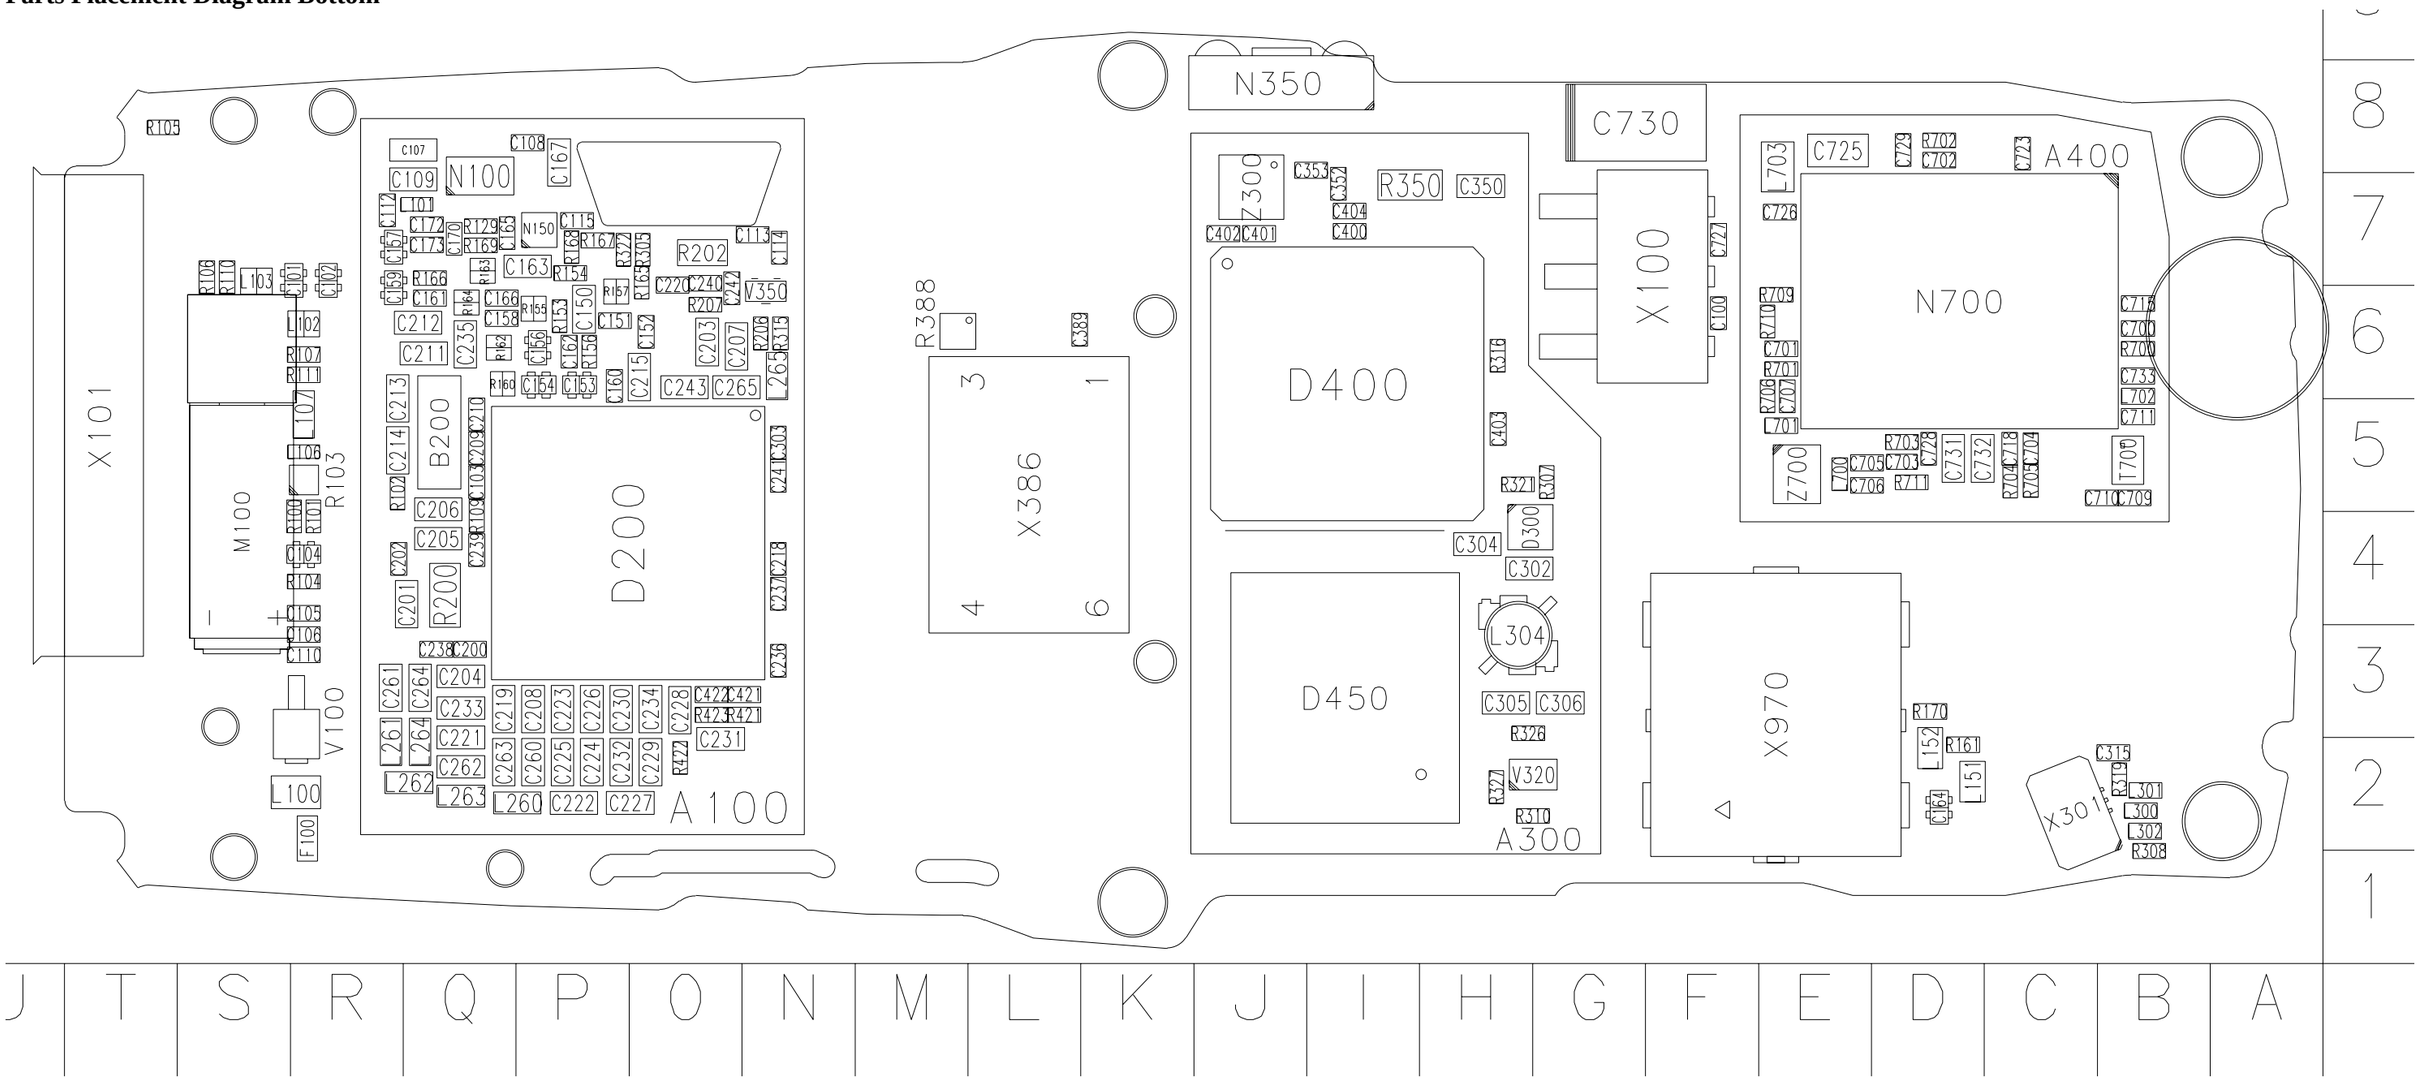

Copyright ©Nokia 2004. All rights reserved.